

EN - Installation, use and maintenance manual

H10 V SHAPE

nobis
YOUR STOVE, OUR PASSION



Dear Customer. Thank you for choosing a product from our range.
You are invited to read this manual carefully before using it, to take full advantage of all its features, in complete safety.
This manual contains information necessary for correct installation, start-up, use, cleaning and maintenance of the product.
Keep this manual in an appropriate place having carefully consulted it.
Improper installation, maintenance not carried out correctly and improper use of the product relieve the manufacturer of any liability towards people or property.
All rights reserved. No part of this instructions manual can be reproduced or transmitted with any electronic or mechanical device, including photocopying, recording or any other saving system, for any proposals other than the exclusive use by the purchaser's staff, without express written permission from the manufacturer.

MANUAL INDEX

1 Introduction	4	9 Menu browsing	23
1.1 Symbols	4	10 First start-up instructions	24
1.2 Planned use	4	10.1 Date and time setting	24
1.3 Improper use	4	10.2 Probe adjustment	24
1.4 Importance of the manual	4	10.3 Room temperature setting	24
1.5 General safety warnings	4	10.4 Fireplace power setting	24
1.6 Legal warranty	5	10.5 Switching ON/OFF the product	25
1.7 Exclusions from the warranty	5	11 The working phase	25
1.8 Spare parts	6	11.1 Saving mode	25
1.9 Identification plate	6	11.2 Clima Comfort function	25
1.10 Disposal of the product	6	11.3 H ₂ O StandBy	27
1.11 Hermetic product	6	11.4 Ventilation management	27
2 Characteristics of the pellet	6	12 Description of the menu functions	27
3 Installation	7	12.1 Thermostat with timer function	27
3.1 Air intake	7	12.2 Auger loading function	28
3.2 Smoke channel and fittings	7	12.3 Pellet/extraction mix	28
3.3 Chimney flue	8	12.4 Stove status	29
3.4 Chimney pot	8	12.5 Enabling external thermostat	29
3.5 Hermetic product installation	8	12.6 Season	30
3.6 Examples of correct installation	9	12.7 Language	30
3.7 Documentation to issue	10	12.8 Contrast	31
3.8 Product unpacking	10	12.9 FW version	31
3.9 Covering assembly	11	12.10 Anticondensation	31
3.10 Hydraulic connection	12	12.11 SLEEP function	29
3.11 Electrical connection	13	13 Advanced hydraulic diagrams	32
4 Examples of hydraulic diagrams	14	13.1 Diagram 01 (DHW tank + heating)	32
5 Maintenance	18	13.2 Diagram 02 (TECH. WTR. tank)	33
5.1 Smoke system maintenance	18	13.3 Diagram 03 (TECH. WTR. + DHW tank)	33
5.2 Product maintenance	18	14 Phases overview	34
6 Technical data of the product	18	15 Functions overview	34
6.1 Product data sheet	18	16 Alerts overview	34
6.2 Technical features	18	17 Anomalies overview	35
6.3 Dimensions	19	18 Description of alarms	35
6.4 Safe distances	19	19 Cleaning the appliance	38
7 Product configuration	19	19.1 Cleaning the fireplace	38
7.1 Configuration of handheld device	19	19.2 Cleaning the glass door	39
7.2 Configuration of ext thermostat	20	19.3 Cleaning the ash pan	39
7.3 Pellet loading	20	20 Wiring diagram	41
8 Description of remote controls	21		
8.1 Description of receiver	21		
8.2 Description of handheld device keys	21		
8.3 Description of handheld device display	22		
8.4 Flat battery signalling	22		
8.5 Concise icons diagram	23		

1 INTRODUCTION

The product by Nobis was designed and manufactured in compliance with the reference standards for the manufacturing products (EN13240 wood stoves, EN14785 pellet appliances, EN13229 fireplaces/ inserts for wood, EN12815 wood stoves), with high quality materials. The products also comply with the essential requirements of the Directive 2006/95/EC

(Low Voltage) and the Directive 2004/108/EC (Electromagnetic Compatibility).

The printing, translation and reproduction, even partial, of this manual is intended as binding by the manufacturer's authorisation and the content of working logic and explanatory figures is considered not to be disclosed.

Always consult the authorised technicians if in doubt and/or confused by operation of the product.

The manufacturer reserves the right to make changes to specifications and technical and/or working features of the product at any time without prior warning.

1.1 SYMBOLS

The following manual contains symbols which highlight the importance of particular descriptions or concepts;



INFORMATION: Compliance with the specifications guarantees correct operation of the product.



ATTENTION: Symbol used to identify particularly important information



DANGER: The presence of this symbol indicates utmost attention is required, to guarantee user and product safety.

1.2 PLANNED USE

The product in this manual, is a fireplace for domestic heating, feed by automatic loading and exclusively with wood pellets.

The product was designed and manufactured to work in safety if the following conditions occur:

- installation by specialist staff according to the specific reference standards;
- use within the limits declared on the product data sheet and in this manual;
- compliance with technical procedures described in the manual;
- carrying out routine maintenance within the times and methods indicated in this manual;
- prompt execution of extraordinary maintenance if necessary (malfunctioning);
- activity and maintenance of safety devices (do not remove or bypass this devices).

1.3 IMPROPER USE

The product must be intended for the use for which it was expressly designed; for any other use, the manufacturer cannot be held in any way liable for damage caused to people, animals or property.

Improper use is intended as:

- use of the product as an incinerator;
- use of the product with fuel other than wood pellets with a diameter of 6 mm;
- use of the product with liquid fuel;
- use of the product with the fire door open and/or glass broken and/or ash pan removed and/or pellet tank open.

Any other use of the appliance other than that planned must be authorised in advance in writing by the manufacturer.

Furthermore, the manufacturer cannot be held in any way liable for errors in installation, adjustment or maintenance of the product.

1.4 IMPORTANCE OF THE MANUAL

The manual has the purpose of providing essential rules for correct installation, use and maintenance of the product.

PRESERVATION: Keep the manual in a place that is easy and quick to find;

DETERIORATION OR LOSS: Consult the official site to download the manual;

PRODUCT TRANSFER: In the event of sale between private individuals of the product, the owner is obliged to deliver the product with the following manual.

1.5 GENERAL SAFETY WARNINGS

Non-compliance with the provisions of this manual can cause damage to people, animals and property.

- Installation, testing of the system, functionality testing and initial calibration of the product must only be carried out by qualified and authorised staff.
- The product must be connected to a single chimney flue that guarantees the draught declared by the manufacturer and which complies with the installation standards outlined in the assembly location of the product.
- The premises where the product is installed must be adequately ventilated (air intake).
- Do not touch the hot surfaces without adequate protective equipment, to avoid burns.
- When in operation, the external surfaces reach high temperatures.
- It is forbidden to make changes to the product unless expressly communicated in writing by the manufacturer.
- In the event of fire in the chimney flue, contact the Fire Brigade immediately.

- The product can be used by children over 8 years of age and people with reduced physical, sensor or mental capacity, or without experience or the necessary know-how, provided they are supervised, or have received instructions on the safe use of the appliance and have understood the dangers involved. Children must not play with the appliance.
- Cleaning and maintenance intended to be carried out by the user must not be carried out by children without supervision.
- Do not dry washing on the product.
- Fuel and flammable materials must be kept a necessary distance from the product. Danger of fire.
- The product must be electrically connected to a system equipped with a sufficient ground system.
- In the event of a fault on the switch on system, do not force switch on using flammable materials and consult an authorised technician.
- For the no hermetic product, installation is forbidden in small rooms and bedrooms.
- Installation is forbidden in surroundings with explosive atmospheres.
- all parts resulting as being faulty due to negligence or careless use, wrong maintenance, non-conforming installation with that specified by the manufacturer (refer to the installation and use manual supplied with the appliance);
- further damage caused by wrong intervention by the user in an attempt to solve the initial fault;
- aggravated damage caused by further use of the appliance by the user once the defect was noted;
- in the presence of a boiler, any corrosion, scale or breakages caused by stray current, condensate, abrasion or acidity in the water, scale removal treatments carried out improperly, no water, sludge or limescale deposits;
- inefficiency of the chimneys, chimney flues or parts of the system on which the appliance depends;
- damage caused by tampering with the appliance, atmospheric agents, natural disasters, vandalism, electrical discharge, fire, faulty electrical and/or plumbing system.

The following are also excluded from the warranty:

- parts subject to normal wear such as gaskets, glass, coverings and grates in cast iron, painted, chrome-plated or gold-plated parts, handles and electrical cables, lights, switch on resistor, indicator lights, knobs, all parts that can be removed from the fireplace (e.g. refractory, brazier);
- colour variations of painted and ceramic parts, as well as the ceramic cracks since they are natural features of the material and use of the product;
- masonry works;
- parts of the system (if present) not supplied by the manufacturer;

Any technical intervention on the product to eliminate the aforementioned defects or resulting damage should therefore be agreed with the Technical Support Centre, which reserves the right to access or refuse the relevant job and in any case they will not be carried out under warranty, but rather Technical Support will provide the possible conditions to specifically agree upon and according to rates in force for the works to carry out. The user will also be responsible for the expenses which will be necessary

to resolve any wrong technical intervention, tampering or however damaging factors for the appliance not attributable to the original defects. Notwithstanding the restrictions imposed by legislation and regulations, every warranty to contain atmospheric and acoustic pollution is also excluded.

1.6 LEGAL WARRANTY

The user, to benefit from the legal warranty, must strictly comply with the provisions indicated in this manual. In particular:

- always work within the use limitations of the product;
- always carry out routine maintenance;
- authorise people to use the machine with proven capacity, attitudes and who are adequately trained for the purpose;
- use original spare parts and specifically for the appliance model.

It is also necessary to provide a:

- fiscal receipt with the purchase date;
- a certificate of compliance issued for installation by authorised staff.

Non-compliance with the provisions contained in this manual will imply immediate expiry of the warranty on the product and on any spare parts assembled later.

1.7 EXCLUSIONS FROM THE WARRANTY

The warranty excludes all malfunctions and/or damage to the appliance resulting from the following causes:

- damage caused by transport and/or movement;

1.8 SPARE PARTS

Only use original spare parts.

Do not wait for the components to wear from use before replacing them.

This measure promotes prevention of accidents caused by people, animals or property in the event of product malfunctioning caused by faults.

You are advised to contact authorised staff to replace spare parts, worn parts and for extraordinary maintenance of the the product.

1.9 IDENTIFICATION PLATE

The plate placed on the back of the product outlines all the characteristic data of the appliance, including the manufacturer's data, the serial number and the CE marking.

1.10 DISPOSAL OF THE PRODUCT

Demolition and disposal of the product is the exclusive responsibility of the owner, who should do so in compliance with legislation in force in his country on safety matters, with respect of and safeguarding the environment.

At the end of its useful life, the product must not be disposed of as urban waste.

It can be delivered to specific differentiated waste collection centres made available by municipal administrations, or dealers who provide this service.

Disposal of the product as differentiated waste means possible negative consequences for the environment and health are avoided, deriving from inadequate disposal. Furthermore, it allows recovery of materials composing the product to obtain important savings in energy and resources.

1.11 HERMETIC PRODUCT

The products manufactured with a perfectly hermetic structure do not consume oxygen in the environment, since they take all the air from outside the home (if correctly installed) and can therefore be positioned inside all homes with a high level of insulation, such as "passive houses" or "with high energy efficiency". Thanks to this technology, there is no risk of smoke emissions in the environment and no ventilation grates are necessary.

As a result, no cold air flows are created in the environment making it less comfortable and reducing the overall efficiency of the system. Hermetic products can also be installed in the presence of forced ventilation or in premises which can go into negative pressure compared to outside.

2 CHARACTERISTICS OF THE PELLETS

Wood pellets are fuel made of pressed sawdust, often recovered from carpentry processing waste. The material used cannot contain any foreign substance such as glue, varnish or synthetic substances.

Sawdust, after drying and cleaning of impurities, it is pressed using a matrix: due to the high pressure, the sawdust heats activating the natural binders in the wood; by doing so, the pellet maintains its shape even without adding artificial substances. The density of wood pellets varies based on the type of wood and can exceed 1.5 - 2 times that of natural wood.

The cylinders have a diameter of 6mm and a variable length of 10 to 40mm.

Their density is equal to approx. 650 kg/m³. Due to the low water content (< 10%), they have a high energy content.

The main quality certifications for pellets on the European market today guarantee the fuel is within class A1

according to ISO 17225-2:2014 (formerly EN 14961). Examples of these certifications are for example EN-Plus, DINplus, Ö-Norm M7135, and guarantee they comply in particular with the following characteristics:

- heating power: 4.6 ÷ 5.3 kWh/kg;
- water content: ≤ 10% of weight;
- percentage of ash: max 1.2% of weight (A1 under 0.7%);
- diameter: 6±1/8±1 mm;
- length: 3÷40 mm;
- content: 100% untreated wood without any additional binder substances (percentage of bark max 5%);
- packaging: in sacks made from eco-compatible or bio-degradable.



The manufacturer recommends, for its products, use of class A1 certified fuel according to the standard En ISO 17225-2:2014, or certified DIN PLUS (more restrictive than class A1) or O-NORM M7135.



Pellets must be kept in a dry environment which is not excessively cold. You are also advised to keep some bags of pellets where the product is installed and operating, to dry them of any humidity present. Non-compliance with this aspect reduces the thermal power of the fuel and means greater maintenance must be done on the product.

3 INSTALLATION



All local and national legislation and European standards must be met when installing and using the product.

The assembly position must be chosen based on the environment, the discharge and the chimney flue. Check, with your local authority, if there are more restrictive provisions regarding the oxidising air intake, the smoke discharge system including the chimney flue and chimney pot.

The manufacturer cannot be held in any way liable in the event of installation non-compliant with legislation in force,

of incorrect premises air exchange or electrical connection non-conforming with standards and/or inappropriate use of the appliance.

Installation must be carried out by a qualified technician, who will issue the purchaser with a Declaration of Conformity for the system and will assume complete responsibility for final installation and resulting good operation of the product.

In particular, he should ascertain:

- there is an adequate oxidising air intake and good smoke discharge compliant with the type of product installed;
- other stoves or devices installed do not cause negative pressure in the room where the product is installed (only for hermetic appliances, a maximum of 15 Pa depression in the surroundings is permitted);
- when the product is on, there is no smoke back draught in the surroundings;
- smoke evacuation is implement in total safety (dimensioning, smoke seal, distances from flammable materials..).

Once the position is decided where to install the product, you need to pay attention:

- if the floor is made of combustible material, you should use protection in suitable material (steel, glass...) which also protects the front part from any falling burning fuel during cleaning operations;
- that the floor guarantees adequate load capacity. if the existing building does not meet this requirement, you should take appropriate measures (for example a load distribution plate).

3.1 AIR INTAKE

The installation premises of non-hermetic appliances must be sufficiently ventilated with specific openings, with particular attention on the position (they must NEVER be blocked), which consent air reintegration in the environment.

The air must be taken directly from outside (not from other rooms, garage, etc.) and must have a net useful section equal or higher than 80 cm² pellet burning stoves and thermostoves (EN 14785) and 100 cm² for boilers (EN 303-5).

The air intake is not necessary for installation of the hermetic appliances that take air directly from outside. Check and comply with the ventilation requirements for simultaneous operations with other combustion devices and in the presence of forced ventilation systems or hoods (refer to section 6.4 of UNI 10683).

3.2 SMOKE CHANNEL AND FITTINGS

The term smoke channel indicates the piping connecting the appliance to combustion with the chimney flue.

For heat generating appliances with an electric fan to expel the smoke, the following installation instructions must be followed, provided by the manufacturer concerning the maximum length and number of curves the smoke channels can have.

If no indications are given for maximum values or deriving from preliminary calculations according to UNI EN 13384-1, the following provisions must be applied:

- comply with the product standard EN1856-2;
- the horizontal sections must have a minimum slope of 3% upwards;
- the length of the horizontal section must be minimal and its projection on plan must not exceed 4 metres;
- the number of changes of direction including introduction in the chimney flue and excluding that by effect of using a "T" element in the appliances with rear smoke output, must not exceed 3;
- the changes of direction must not have an angle over 90°(45° curve recommended);
- the section must have a constant diameter equal to the output of the fireplace up to the fitting in the chimney flue;
- it is forbidden to use flexible metal and fibre cement piping, furthermore the piping must guarantee pressurised sealing;
- the smoke channels must not cross premises in which installation is forbidden of combustion appliances;
- Use watertight piping with silicone gaskets.

In any case, the smoke channels must be sealed by combustion and condensate products, as well as insulated if passing inside the installation premises.

Assembly is not permitted of draught manual adjustment devices on forced draught appliances.



You need to install a first vertical smoke channel section of at least 1 metre to guarantee correct smoke ejection.

3.3 CHIMNEY FLUE

When installing the chimney flue, the following provisions must be applied.

- comply with the product standard EN 1856-1;
- it must be installed using materials suitable to guarantee resistance to normal mechanical and chemical stress, and have a correct insulation, to avoid the formation of condensate, therefore it must be hermetically insulated;
- have a mainly vertical state and not be choked along its length;
- be correctly spaced using air cavities and insulated from flammable materials,
- the changes in direction must be at most 2 and with an angle not exceeding 45°;
- the chimney flue inside the home must however be insulated and can be inserted in a cavity provided it complies with the relevant piping standards;
- the smoke channel should be connected to the chimney flue using a "T" joint with an inspectionable collection chamber for collection of fuel residue and, in particular, for condensate collection.



It is not possible to connect the appliance to a chimney flue shared with other combustion appliances or in the presence of hood exhausts.



It is forbidden to use direct wall discharge or towards closed spaces or any other form of discharge not planned by legislation in force in the country of installation (In Italy, only roof discharge is permitted)



You are advised to check the safe distances which must be complied with in the presence of combustible materials and the type of insulating material to use (data available directly on the chimney flue plate)

3.4 CHIMNEY POT


The standard UNI 10683 states the stack must meet the following characteristics:

- the smoke outlet section must be at least double the inner section of the chimney;
- shaped to prevent water or snow penetration;
- be built in such a way that wind cannot affect the smoke outlet (wind-proof cap);
- the opening measurement, which is measured between the lower coverage protective layer and the lower point of the smoke outlet section into the atmosphere, must be outside the back draught area;
- Be built far from antennas or satellite dishes and must never be used as a support.


3.5 HERMETIC PRODUCT INSTALLATION

In the event of installation of a hermetic product, you can execute one of the following types of connection with the piping:


- smoke discharge (1) and recovery of oxidising air directly from outside (2)

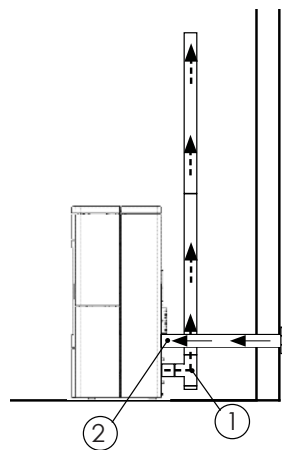

- smoke discharge (1) and oxidising air channelling (2) taking advantage of its coaxial discharge to expel the smoke and pick the air; therefore, installation is not necessary of a grate to recirculate the air inside the premises where the the product.

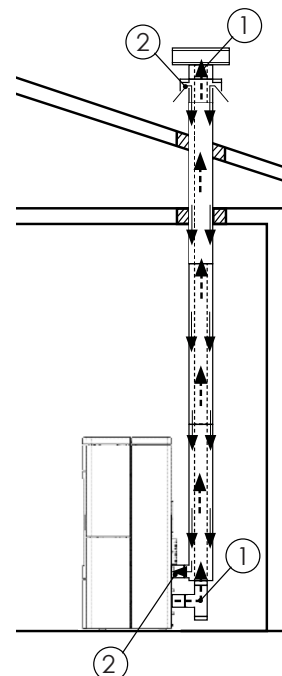

For coaxial installation or air sampling directly from the outside, it is recommended not to exceed 2.5 / 3 linear meters in order to ensure correct oxygen supply to combustion.

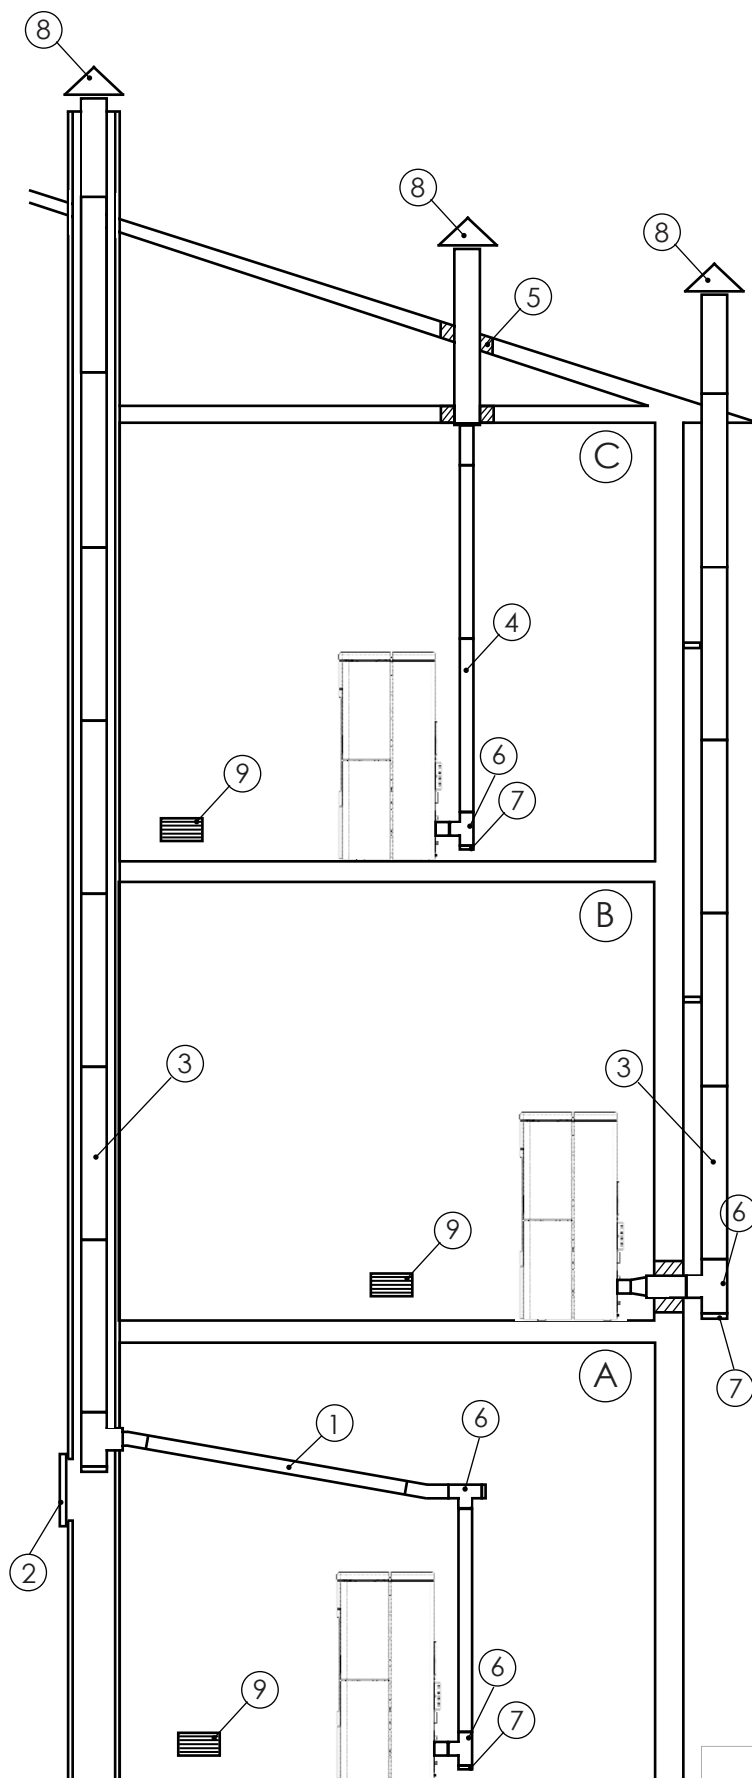

3.6 EXAMPLES OF CORRECT INSTALLATION

installation of the product (A) necessary for the horizontal section for connection to an existing chimney flue. Based on a slope of 3-5%, to reduce ash deposit in the horizontal pipe section which must not be over 3m (1). The existing chimney flue must be inspectionable (2).

Installation of the product (B) requires an insulated chimney flue (3) with an internal diameter of no less than 100mm, since all the smoke piping was assembled outside the home.

Installation of the product (C) requires a single wall chimney flue (4) for the section inside the home. Relating to the part placed in the attic, you are advised to install a chimney flue $\varnothing 120\text{mm}$, with perforation for passage of the piping, extended to:

- minimum 100mm around the pipe if in contact with inflammable parts such as cement, bricks, etc.;
- minimum 300mm around the pipe (or as described in the plate data) if in contact with flammable parts such as wood etc.

In both cases, insert adequate insulation (5) between the chimney flue and the attic.

You are advised to check and comply with the plate data of the chimney flue, in particular the safe distances from combustible materials.

The previous rules also apply for holes made on walls.

On the lower part of the chimney flue, for all 3 installations, a "T" fitting (6) was assembled with an inspection plug (7), as well as on the inlet of the chimney flue.

The upper part of the chimney flue, for all 3 installations, has a wind-proof chimney pot (8) assembled.

In the home, for all 3 installations, a grate is planned to guarantee correct oxygenation of the premises where the product is positioned.

Grate not necessary if appliance is hermetically sealed.

! It is not recommended to install a 90° curve as an initial section which would quickly cause ash to block smoke passage, causing draught problems in the appliance.

! In the event of particular atmospheric conditions and/or hostile draught conditions, the product can overcome these situations provided due installation measures are in place, for example a wind-proof chimney pot.

3.7 DOCUMENTATION TO ISSUE

When installation is concluded, the installation technician must deliver to the user:

- the use and maintenance booklet of the appliance supplied by the manufacturer;
- the technical documentation of the accessories used and subject to maintenance;
- the documentation relevant to the evacuation system of combustion products;
- The system booklet (where planned);
- the documentation certifying installation;

The useful documentation for installation liability must include:

- a detailed description (also including photographs) of the presence of other heat generators;
- Declaration of Conformity of the system to standard (M.D. 37/08);
- general description, or diagram or photographic documentation of the changes made to the system, if intervention was necessary during installation;
- Use of certified material with the CE mark (305/2011);
- possible instructions relating to the warranty;
- the date and signature of the installation technician;



NOBIS SRL cannot be held in any way liable in the event of non-compliance with the installation and start-up standards of its products.

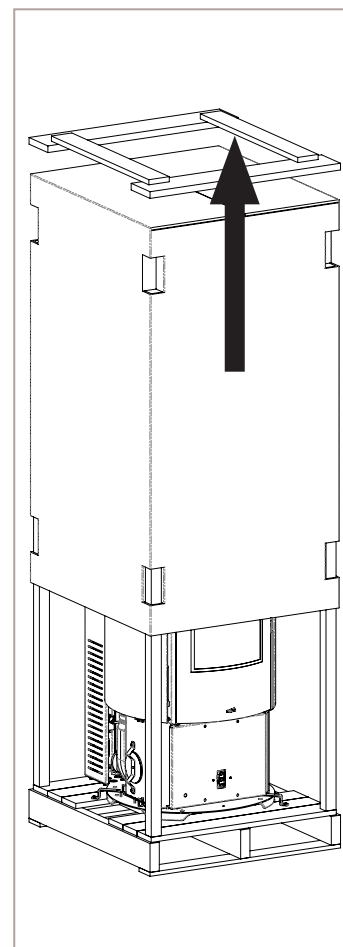


Fig.1

3.8 PRODUCT UNPACKING

Packaging is composed of boxes in recyclable cardboard according to the RESY standards and wooden pallets. All packaging materials can be re-used for similar use or, if necessary, disposed of as urban waste, in compliance with legislation in force.

Remove the strap binding the pallet to the packaging and lift the cardboard **Fig.1**; remove the plastic bag around the product, ensuring it is intact.

The body must always be moved in a vertical position using trolleys.

Pay particular attention so that the door and its glass are protected against mechanical impact which would compromise their integrity.

If possible, unpack the product near the area where it will be installed.

To remove the appliance from the pallet, you can remove the two screws placed under the pallet (13 hex key) to release the appliance from the wooden base. **Fig.2**

Position the equipment and proceed with its connection to the chimney flue.

Find, using the 4 adjustment feet, the right level so that smoke discharge and the pipe are connected correctly.


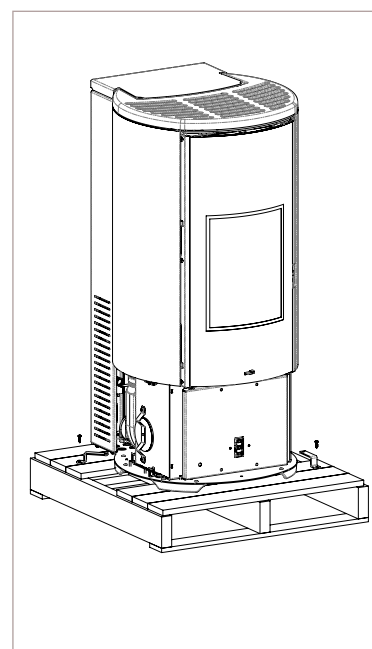


Fig.2

3.9 COVERING ASSEMBLY



Remove the cast iron cover of the product, remove the black upper side panel with a 8mm hexagonal wrench and open the packaging containing the covering.

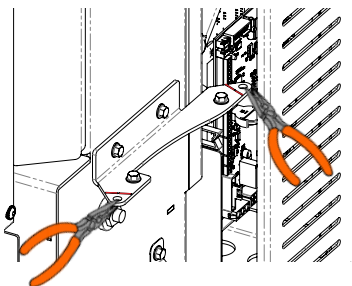

Remove the pre-drilled blank from the sheet metal with the assistance of a suitable tool.



LOWER SIDE MAJOLICA PANEL INSTALLATION

Take the lower right side majolica from the packaging and position the plate, with the centering holes, in the pins placed on the base of the product. Bring the majolica to the vertical position and fix the upper part with the screws, previously removed, paying attention to align correctly with the stove door.

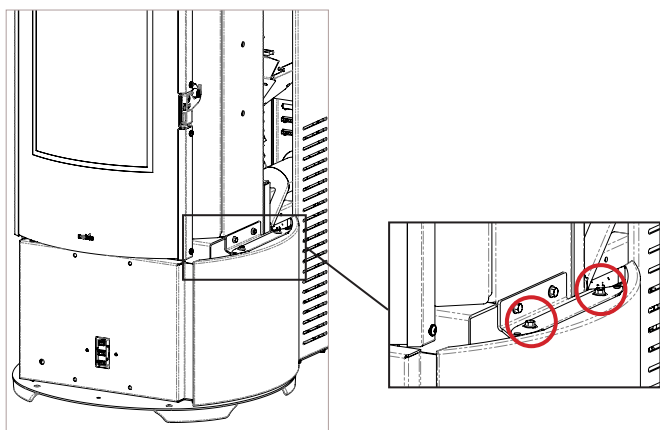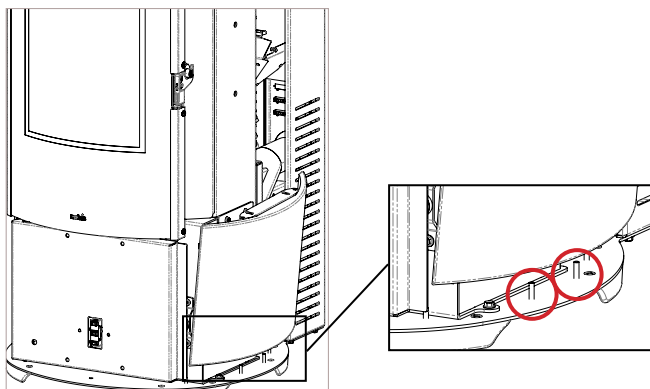

ASSEMBLY OF THE UPPER SIDE PANEL


Remove the panel, previously disassembled, and insert the pins located in the lower part of the panel, into the holes on the previously fixed majolica casing. Bring the panel into position and fix the upper part with the screws, previously removed, paying attention to align correctly with the stove door.

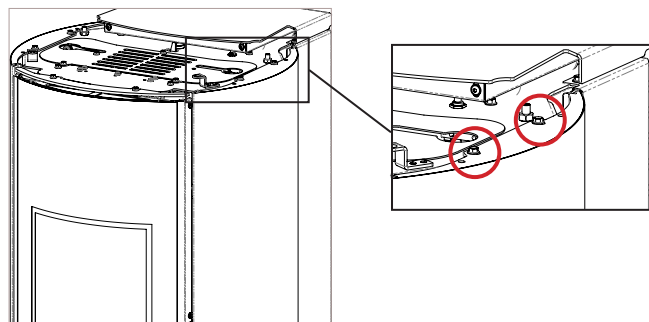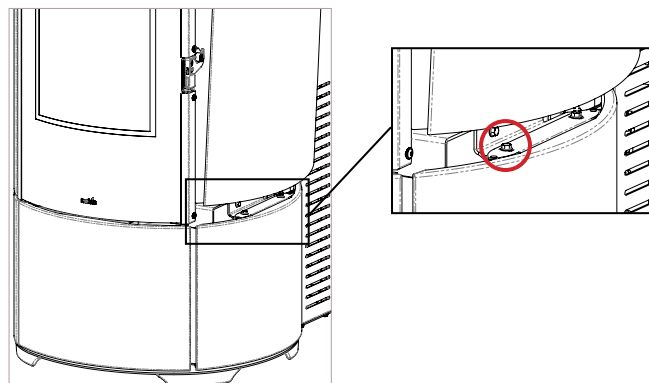


Repeat both operations for mounting the opposite side.

LOWER FRONT MAJOLICA ASSEMBLY



Open the door that hides the ash drawer and remove the lower front majolica and 4 screws (M5x12) from the packaging. Position the majolica on the external side of the door (holding it with your hand) and using the 4 screws fix the majolica through the pre-drilled holes.

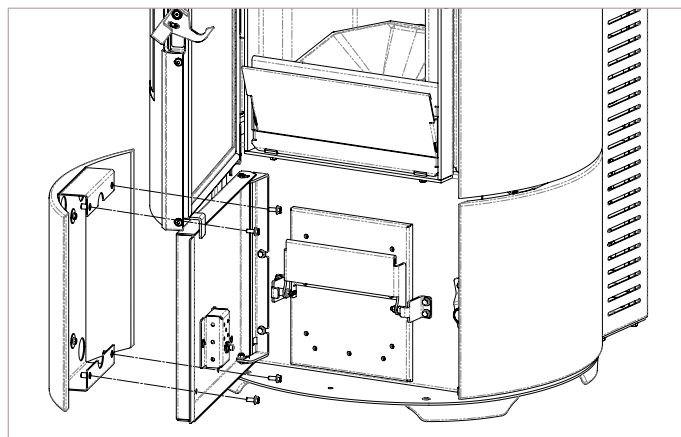

When finished, replace the cast iron top.

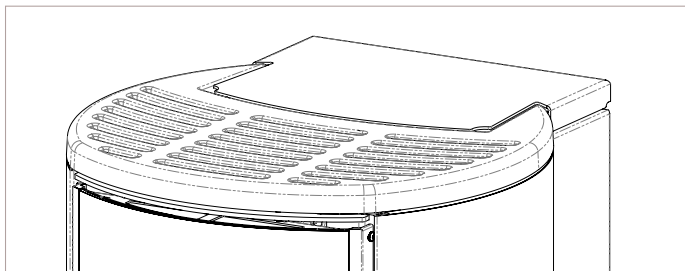

Below the final result.

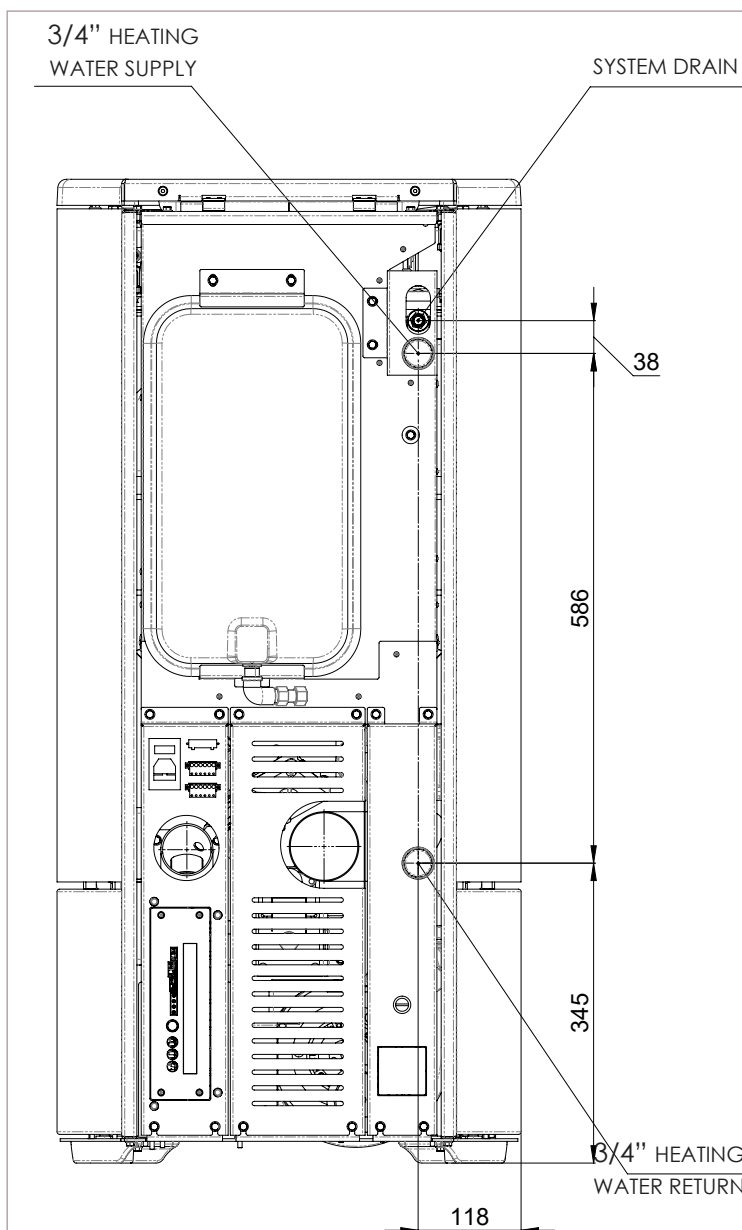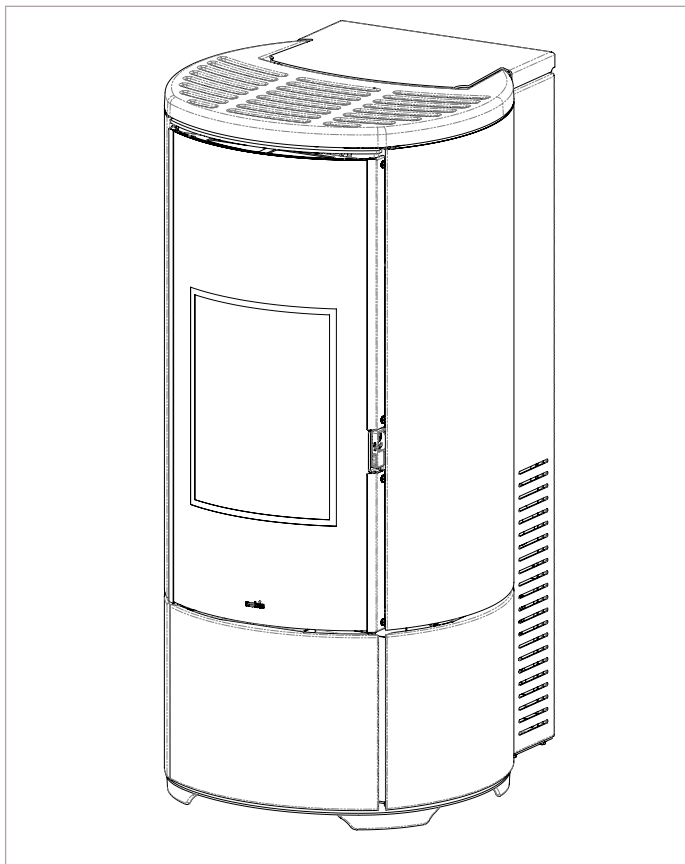

3.10 HYDRAULIC CONNECTION


In this section of the manual all the steps to perform the hydraulic connection of the appliance to the dwelling system are illustrated.

! The connection of the product to the hydraulic system must be carried out exclusively by specialized personnel able to perform the installation to perfection, respecting any existing provisions in the Country of Installation.

! In order to remove any residues and deposits, wash the entire system before connecting the product. Always install gate valves upstream of the product so as to isolate it from the water system, should it be necessary to move or relocate it to perform routine and/or extraordinary maintenance operations. Connect the appliance using flexible pipes to avoid overtightening it to the system and to allow slight movements.

3-bar DRAIN VALVE

The inspectable safety valve is located on the back of the product. It is mandatory to connect a rubber pipe to the safety drain, which can withstand a temperature of 110 °C (not supplied), to be taken outside for possible water outlet.

 The appliance manufacturer is not responsible for any flooding caused by the intervention of the safety valves in case of inaccurate connection to the outside of the product and to a proper collection and drain system.

SYSTEM CLEANING

Connections must be easy to disconnect by means of swivel fittings.

To preserve the heating system from harmful corrosion, scaling or deposits, flushing the system using appropriate products - in accordance with the UNI 8065 standard (treatment of water in heating systems for civil use) - before installing the appliance is paramount.

EXPANSION VESSEL

The product is equipped with an expansion vessel to compensate for the increase in water pressure inside the boiler in case of overheating. Therefore, it is necessary to reckon whether the expansion vessel the product is equipped with is capable enough. Otherwise, adding a supplementary expansion vessel must be taken into account.

SYSTEM FILLING

To fill the system, install a pipe in the dedicated inlet and, by opening the tap, proceed with the filling. During this operation, the venting of any air present in the system is guaranteed by an automatic air vent "Jolly valve" (supplied with the product). To allow the valve to vent, it is recommended to loosen the gray cap of one turn. The COLD system loading pressure must be 1 bar.

If, while operating, system pressure happens to drop (during evaporation of gases dissolved in the water) below minimum values - as indicated above - the User must act on the filling tap to bring it back to the initial value. For a proper HOT work of the appliance, the pressure in the boiler must be 1.5 bar. To monitor system pressure, fit a pressure gauge or display instantaneous pressure in STOVE STATUS. Always close the tap after the filling operation has been carried out completely.

It is normal to hear noises and gurgling sounds: it means that the air in the system has not been completely removed.


WATER FEATURES

The characteristics of the water used for filling the system are very important to avoid mineral salt deposits and scaling along the pipes inside the boiler and in the exchangers.

Therefore, please pay attention to:

- Water hardness in the plant to prevent any issues due to scaling.
- Installation of a water softener if water hardness makes it necessary.
- Fill the system with treated water (Demineralized).
- Possible installation of an anti-condensation circuit.
- Installation of hydraulic shock absorbers to avoid the so called "water hammer" effect along pipes and joints.



 It should be remembered that scales drastically reduce performance due to their low thermal conductivity.

3.11 ELECTRICAL CONNECTION

The product power supply cable must only be connected after concluding installation and assembly of the product, it must not be in contact with hot parts and must remain accessible after installation. To carry out electrical connection, proceed as described below:

- connect the power supply cable on the back of the appliance;
- connect the cable plug to the current socket on the wall.



You can connect an outer thermostat with timer to the appliance for its regulation or to switch on and off. For connection and management of the "outer thermostat" function, refer to the specific chapter in the following pages of this manual.

4 EXAMPLES OF HYDRAULIC DIAGRAMS

DIAGRAM 00 - DIRECT CONNECTION TO PLANT

- 1 - Thermo pellet stove
- 2 - Thermometer
- 3 - Pressure gauge
- 4 - Anti-condensation valve
- 5 - System separator
- 6 - System manifold
- 7 - Mixed distribution group
- 8 - Direct distribution group
- 9 - Gas boiler
- 10 - Aqueduct
- 11 - Sanitary water
- 12 - Wall-mounted thermostat
- 13 - Floor heating
- 14 - Heating with radiators
- 15 - Three-way heating valve
- 16 - DHW storage tank (Boiler)
- 17 - DHW flow switch
- 18 - Mixing valve
- 19 - Technical water storage tank (hot water tank)

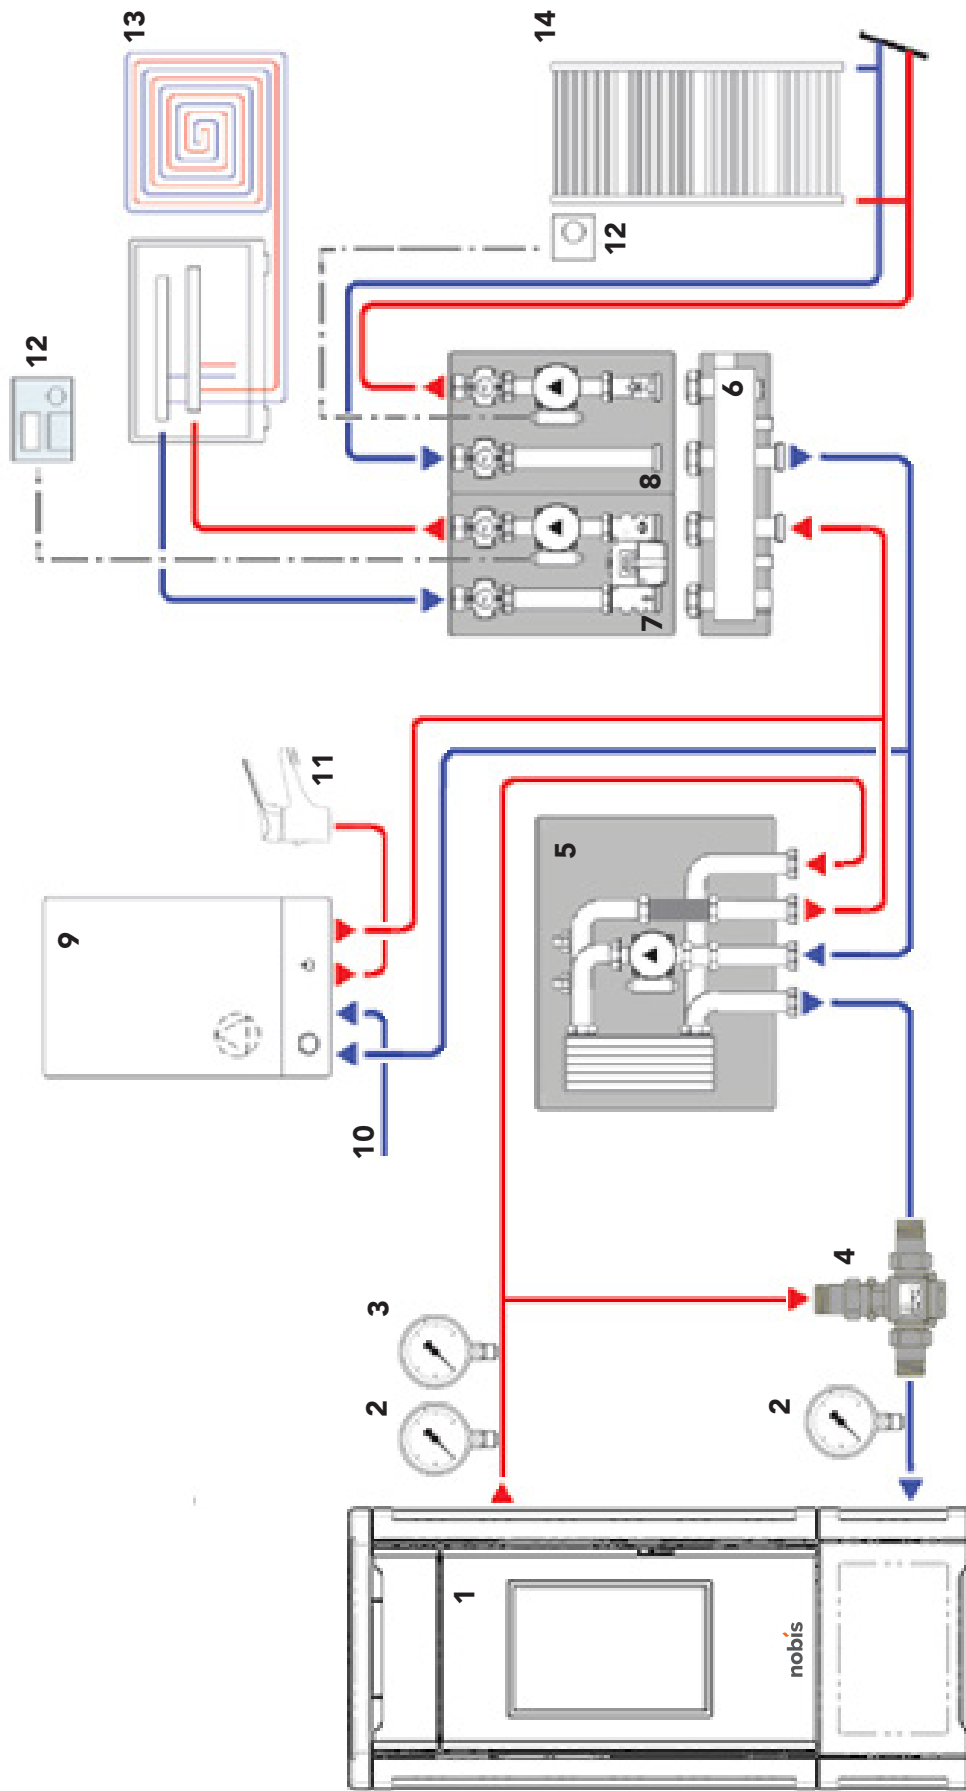


DIAGRAM 01 - DIRECT CONNECTION TO PLANT + DHW TANK

- 1 - Thermo pellet stove
- 2 - Thermometer
- 3 - Pressure gauge
- 4 - Anti-condensation valve
- 5 - System separator
- 6 - System manifold
- 7 - Mixed distribution group
- 8 - Direct distribution group
- 9 - Gas boiler
- 10 - Aqueduct
- 11 - Sanitary water
- 12 - Wall-mounted thermostat
- 13 - Floor heating
- 14 - Heating with radiators
- 15 - Three-way heating valve
- 16 - DHW storage tank (Boiler)
- 17 - DHW flow switch
- 18 - Mixing valve
- 19 - Technical water storage tank (hot water tank)

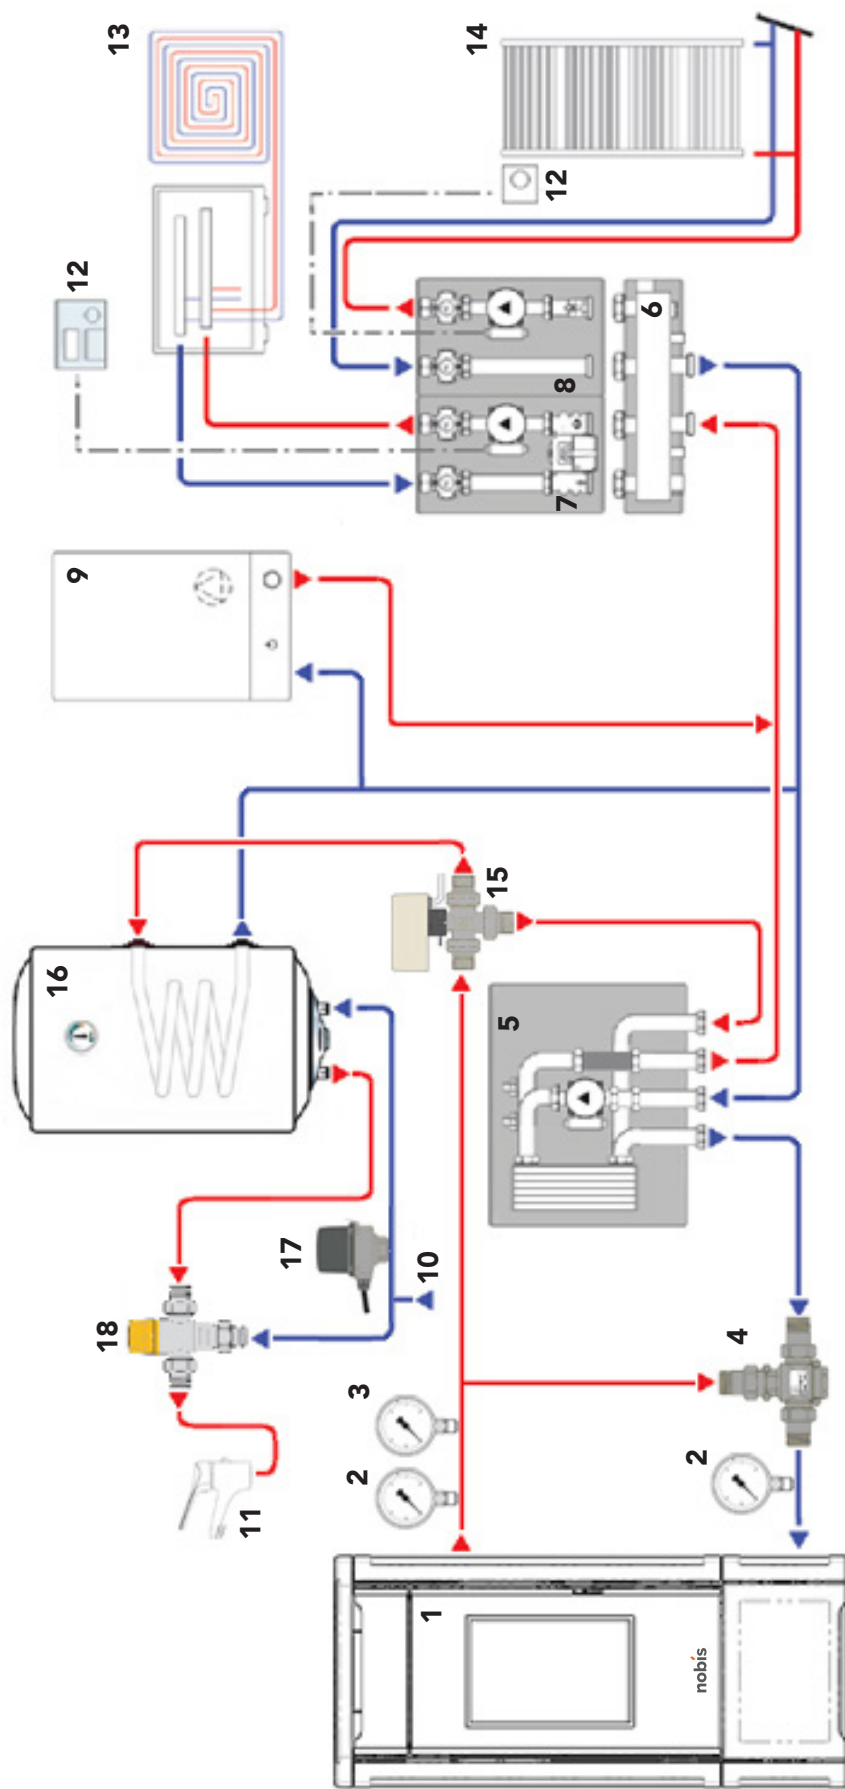


DIAGRAM 02 - TECHNIC WTR TANK (PUFFER)

- 1 - Thermo pellet stove
- 2 - Thermometer
- 3 - Pressure gauge
- 4 - Anti-condensation valve
- 5 - System separator
- 6 - System manifold
- 7 - Mixed distribution group
- 8 - Direct distribution group
- 9 - Gas boiler
- 10 - Aqueduct
- 11 - Sanitary water
- 12 - Wall-mounted thermostat
- 13 - Floor heating
- 14 - Heating with radiators
- 15 - Three-way valve (heating/domestic)
- 16 - DHW storage tank (Boiler)
- 17 - DHW flow switch
- 18 - Mixing valve
- 19 - Technical water storage tank (hot water tank)



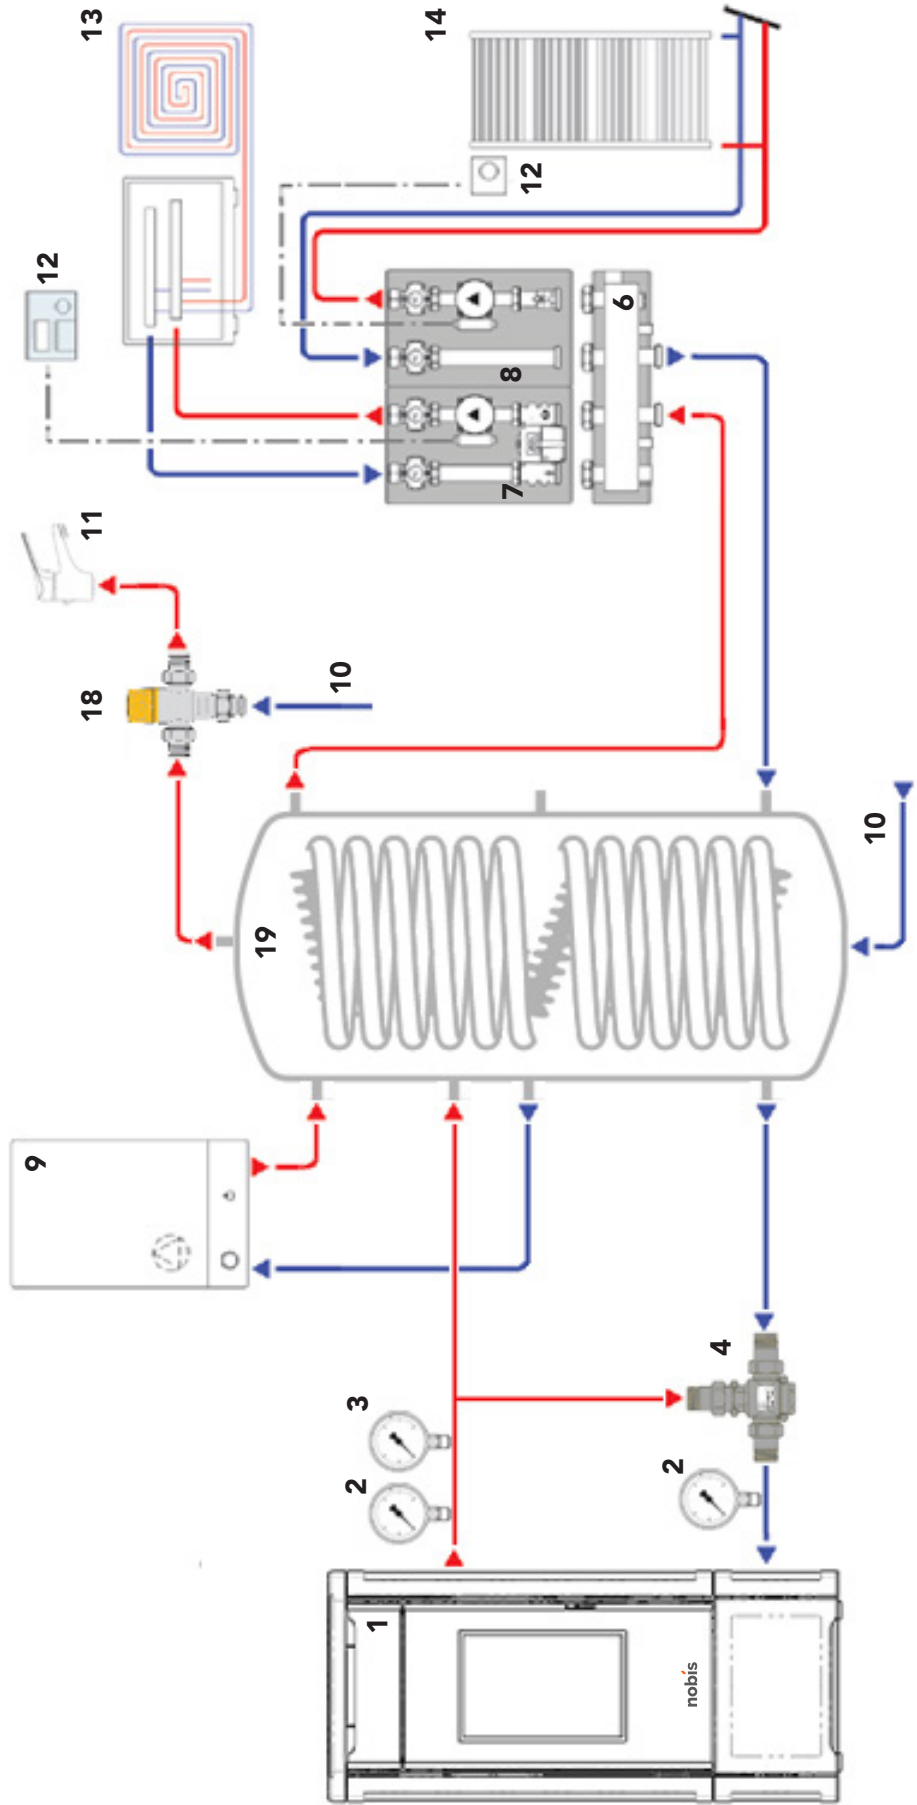


DIAGRAM 03 - TECHNIC WTR. (PUFFER) + DHW TANK

- 1 - Thermo pellet stove
- 2 - Thermometer
- 3 - Pressure gauge
- 4 - Anti-condensation valve
- 5 - System separator
- 6 - System manifold
- 7 - Mixed distribution group
- 8 - Direct distribution group
- 9 - Gas boiler
- 10 - Aqueduct
- 11 - Sanitary water
- 12 - Wall-mounted thermostat
- 13 - Floor heating
- 14 - Heating with radiators
- 15 - Three-way heating valve
- 16 - DHW storage tank (Boiler)
- 17 - DHW flow switch
- 18 - Mixing valve
- 19 - Technical water storage tank (hot water tank)

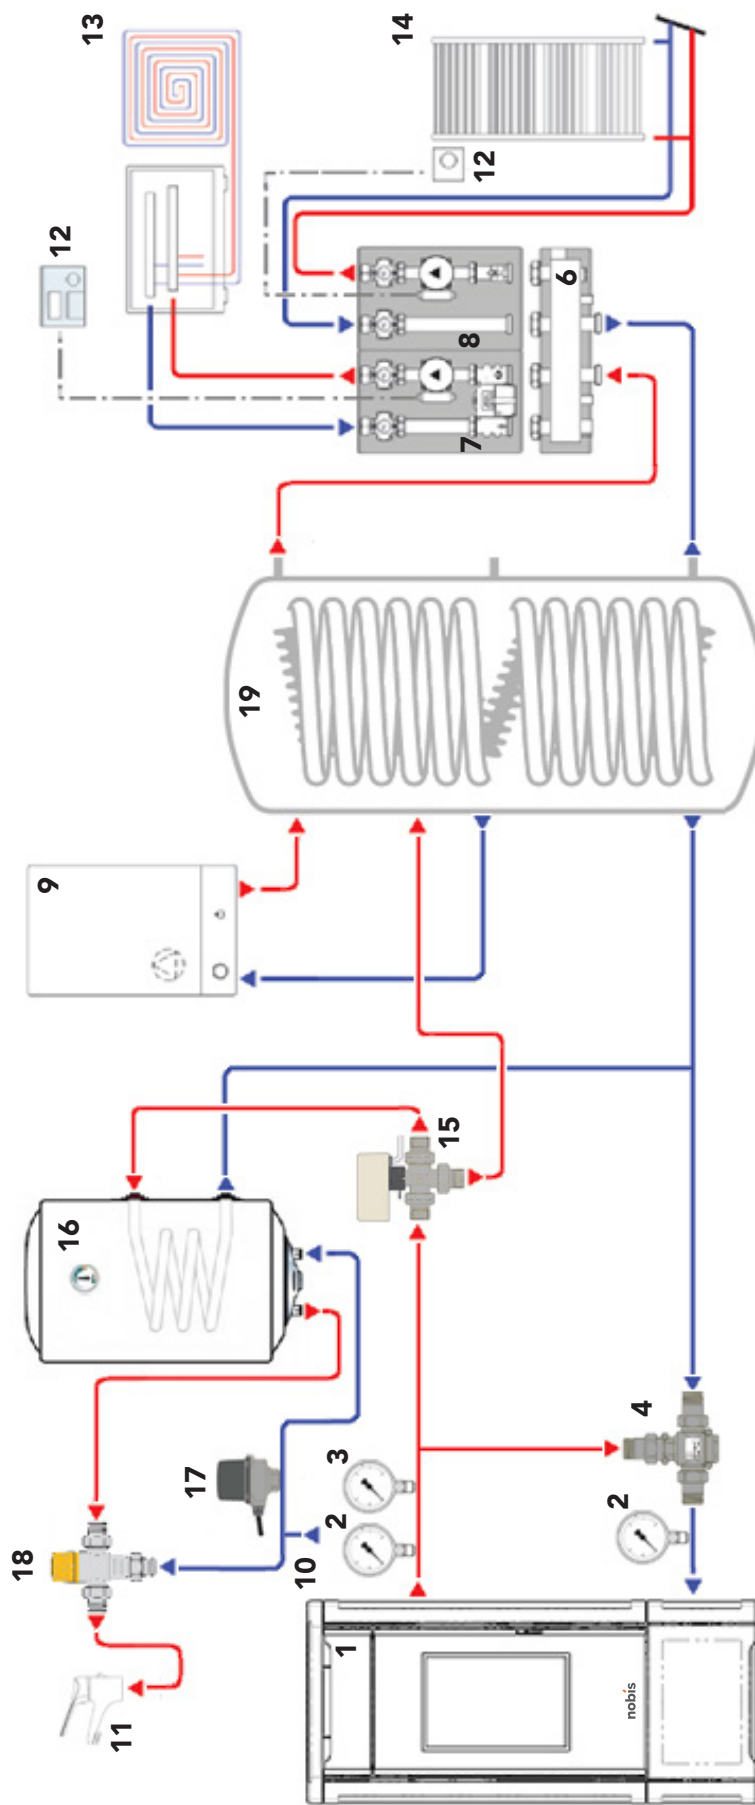

! It is compulsory for the system to be grounded and have a differential switch in compliance with legislation in force. Furthermore, ensure the socket is compatible with the type of plug on the power cable used.

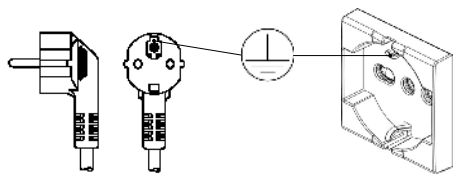

5 MAINTENANCE

The maintenance operations, excluding routine cleaning (explained in the relevant paragraph), must be carried out by authorised, technical staff. Remember, before carrying out any maintenance operation, implement the following precautions:

- all parts of the product must be "cold";
- ensure there is no form whatsoever of combustion (for example ash still hot);
- use of safety devices as per the directive;
- remove the plug from the electrical socket;
- having terminated maintenance, reset the product paying attention to re-activate all the safety devices.

5.1 SMOKE SYSTEM MAINTENANCE

The chimney flue must always be cleaned, since deposits of soot or fuel residue reduce the section blocking its draught, compromising good operation of the product and, if in large quantities, can catch fire. It is compulsory to have a qualified chimney sweep clean and check the chimney flue and the stack at least once a year or after prolonged stoppage due to non-use of the appliance. At the end of the control/maintenance, ask for a report to be issued stating the system is safe. Lack of cleaning prejudices safety of the system.

5.2 PRODUCT MAINTENANCE

Carry out at least once a year or on each "Service Hours" signalling (signal that appears on screen when the working hours have been exceeded, over which

excellent product operation is not guaranteed). In this phase, the authorised technician should:

- completely and accurately clean the smoke pipes;
- check the sealing status of all the gaskets;
- remove broken pellet residue inside the pellet tank;
- re-assemble all parts of the appliance;
- check correct operation and good quality combustion

6 TECHNICAL DATA OF THE PRODUCT

This chapter issues to the end user all the information relating to the technical data of the product, the dimensions, the installation measurements, the minimum distance to comply with from walls and furniture, sofas, etc.

6.1 PRODUCT DATA SHEET

PRODUCT DATA SHEET	
EU 2015/1186	
Brand	Nobis
Model	H10 V SHAPE
Energy efficiency class	A++
Direct thermal power (Kw)	13.3
Indirect thermal power (Kw)	14.2
Water thermal power (kW)	10
Energy efficiency index	133.9
Useful efficiency (Nominal power %)	93.9
Useful efficiency (Reduced power %)	93.9
Comply with the warnings and instructions for installation and periodic maintenance of the instructions manual.	



6.2 TECHNICAL FEATURES

Modello	H10V SHAPE	
	Reduced	Nominal
Weight of appliance (kg)	245	
Water quantity (lt)	10	
Min. working pressure (bar)	1	
Max. working pressure (bar)	2.5	
Ø air inlet (mm)	60	
Ø smoke outlet pipe (mm)	80	
Vol. max. heating* (m ³ /h)	327	
Power introduced (kW)	6.8	14.2
Yield introduced (kW)	6.4	13.3
Water output power (kW)	4.8	10
Yield (%)	93.9	93.9
CO 13% O ₂ (%)	0.007	0.002
Tank capacity (kg)	20	
Pellet hourly consumption (kg/h)	1.4	2.9
Autonomy (h)	14.5	7
Absorbed electrical power (W)	260	
Electrical power supply (V-Hz)	230	
Discharge gas flow (g/s)	6.37	8.66
Minimum draught (Pa)	10	12
Smoke temperature (°C)	82	115


* this value can vary based on the type of energy class of the home and the type of pellet used.

The data outlined are approximate and non-binding and can vary based on the type of pellet used. The manufacturer reserves the right to make changes for the purpose of improving product performance.

6.3 DIMENSIONS

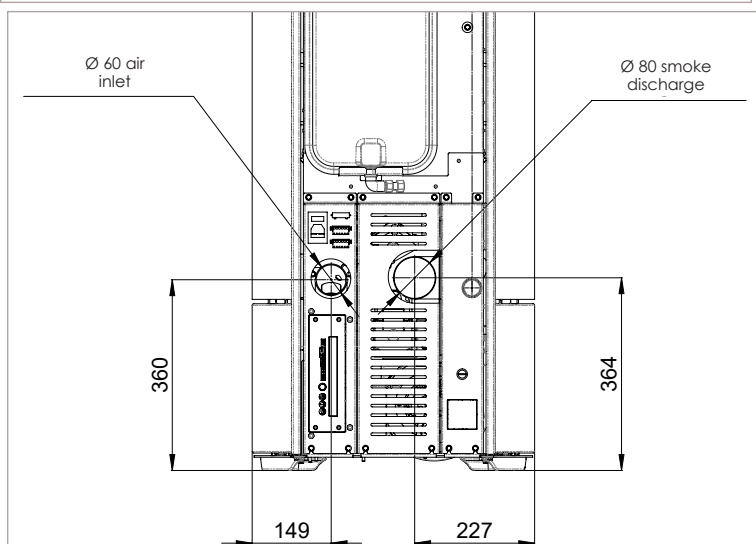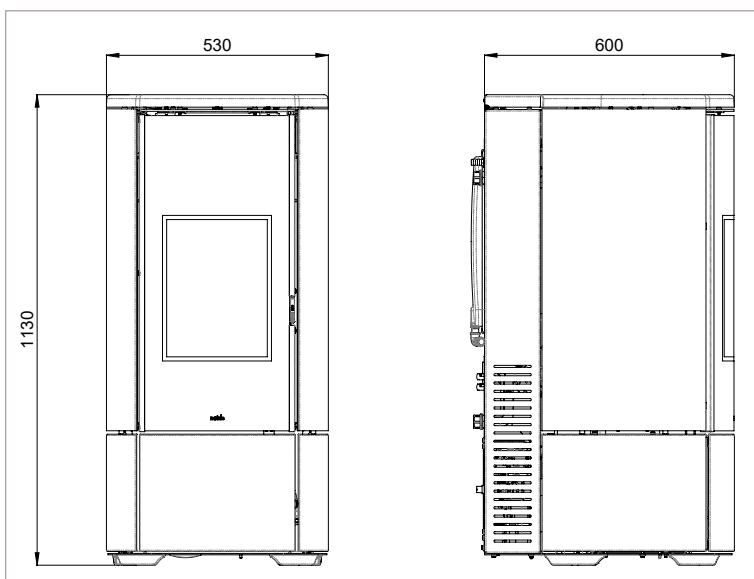


6.4 SAFE DISTANCES

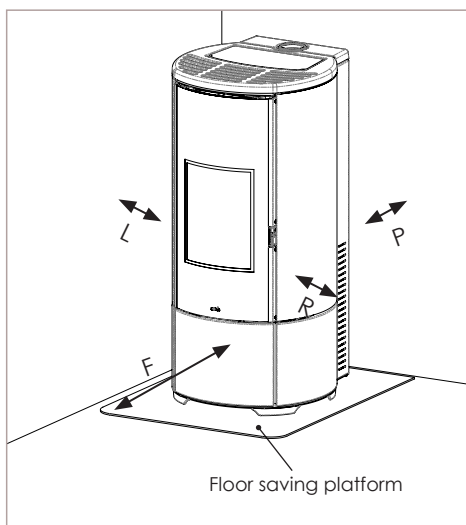

Distanza minima da materiali infiammabili		
R	Right hand side	150 mm
L	Left hand side	150 mm
P	Rear	100 mm
F	Front	800 mm

7 PRODUCT CONFIGURATION

Once all the installation, covering assembly (where present as a kit) and electrical connection are in place, with utmost attention, access the rear part of the product to power it.

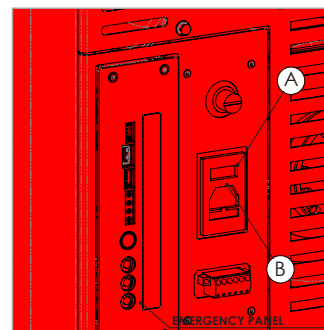

The "I/O" (A) switch in the figure above must be positioned on "I". In the event of a power failure, check the condition of the fuse placed under the switch (B) (4A fuse EU configuration). During periods of non-use, you are advised to disconnect the cable powering the appliance, and also the batteries from the handheld device.

7.1 CONFIGURATION OF HANDHELD DEVICE

Remove the protective cover of the batteries on the rear of the remote control, as in the figure (A), and insert 3 batteries (type AAA Alkaline 1.5V) in the handheld device compartment, paying attention to polarity. Close the protective cover of the batteries as in the figure (B).



CAUTION
Risk of explosion if battery is replaced with the wrong type.

The batteries, once exhausted, must be disposed of in the dedicated collection centers.

To protect the battery from adverse conditions or misuse, remember to:

- keep the command away from heat sources, risk of explosion;
- remove the batteries in case of prolonged not use of command, risk of oxidation and liquid leakage;

Nobis srl declares that the type of "Handheld" radio device complies with Directive 2014/53 / EU.

The full text of the EU declaration of conformity is available at the following Internet address:


<https://www.nobisfire.it/wp-content/uploads/2019/04/DoC-Palmare-Radio-Nobis-1.pdf>

The handheld device, after a first short screen with the manufacturer's logo, lists a series of languages available on the menu.




Select the language, using the keys (↑) (↓) that you want to use as the display standard. Press the key (OK) to confirm and go to the next screen.

To work correctly, the handheld device requires interfacing with the electronic board inside the product. For this reason, the display shows a first installation message.

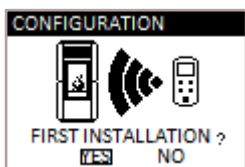


If first use of the handheld device, choose **YES** with the selection keys (↑) (↓). Press the key (OK) to confirm and go to the next screen.

Follow the guide instructions to link via remote the appliance to the display, as outlined in the figure below.

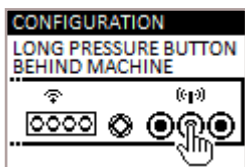

Keep the remote communication key (hand icon) of the electronic board pressed for a few seconds, placed on the rear of the product, to start the unit search procedure.

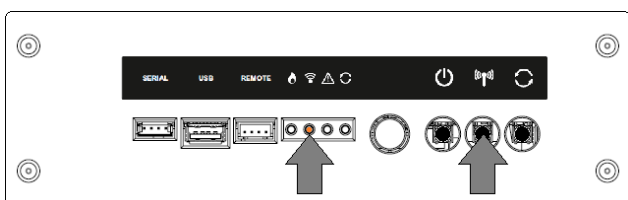

The yellow, flashing led, under the icon (Wi-Fi symbol) indicates the electronic board is waiting to receive the handheld device signal.

Pressing the confirm key (OK) on the handheld device, the components can communicate with one another.


A tick sign on the display, accompanied by an acoustic signal, indicates the remote connection operation has successfully concluded.



If the batteries are replaced, you don't necessarily have to follow the initialisation procedure of the handheld device. In this case, when the display shows the message "FIRST INSTALLATION?", select **NO** and press the confirm (OK) key.

7.2 CONFIGURATION OF EXT THERMOSTAT

If you want to manage the appliance from a different room (in that specific room, the remote handheld device cannot communicate), you can connect an external thermostat to the product, to allow modulation of combustion or, by activating a particular function, allow switch on or off of the product. As in the figure below, connect the terminals of the thermostat to the terminal board on the back of the product (near the emergency panel).

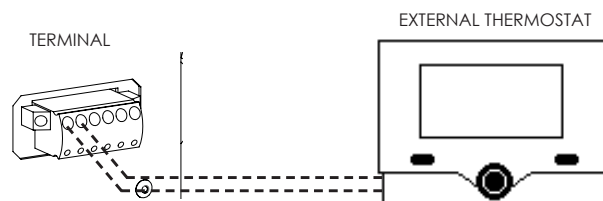


Following electrical connection, to allow the control unit to recognise the presence of the t.ext, the recognition function must be enabled from the SETTINGS menu (see the "ENABLE EXTERNAL THERMOSTAT" paragraph)

i By enabling the function that allows external thermostat enabling, on the handheld device reading and management of the ambient temperature are inhibited. The handheld device displays TON if required, TOFF if the temperature set on T.ext is reached.


7.3 PELLETT LOADING

Fuel is loaded by inserting pellets from the upper part of the product, opening the door. Ensure the content of the bag of pellets does not fall around the edges of the tank, paying particular attention to centring, during the loading phase. Also avoid the pellet packaging coming in contact with hot surfaces.

i Ensure you correctly close the cover of the tank again after loading the pellets. Closure is controlled by an electronic contact (for the models where planned). In the event of non-closure, a sign warns the user to pay attention to tightening, before passing to alarm mode, in the event the warning is ignored.

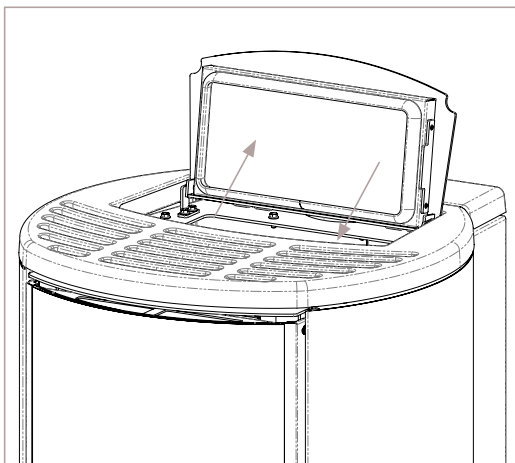

i In the event of malfunctioning of the remote communication between the handheld device and the receiver, or if the batteries are flat, use the **emergency cable** supplied, to restore communication between the remote devices.

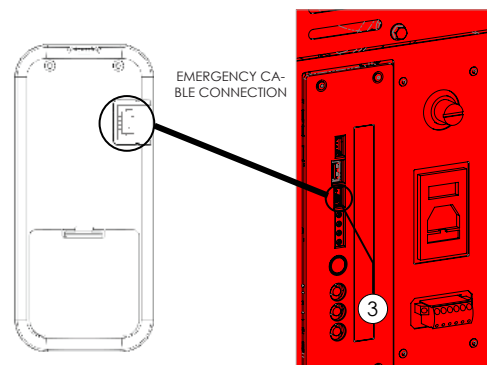

8 DESCRIPTION OF REMOTE CONTROLS

Before switching on the appliance, you are advised to read the following chapter carefully relating to use of the receiver and the handheld device, as well as their related functions.


INFORMATIVE NOTE:

- frequency bands and transmitted power used by the equipment as reported in technical documentation: 868.3MHz - 869.85MHz
- frequency bands and respective power limits transmitted applicable to the device (frequencies and standardized powers): 6dBm ERP

! Before connection using the emergency cable, remove the batteries from the handheld device from the specific compartment. DANGER OF FIRE


8.2 DESCRIPTION OF HANDHELD DEVICE KEYS

The handheld device is presented as in the image below:

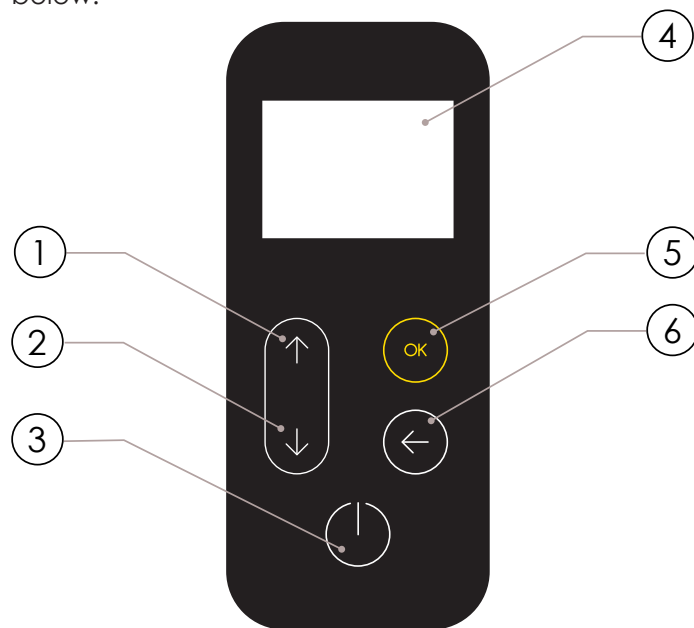

8.1 DESCRIPTION OF RECEIVER

The appliance is equipped with an emergency remote board, placed at the back of it, which allows basic management of the functions in the event the handheld device is faulty or not working properly.

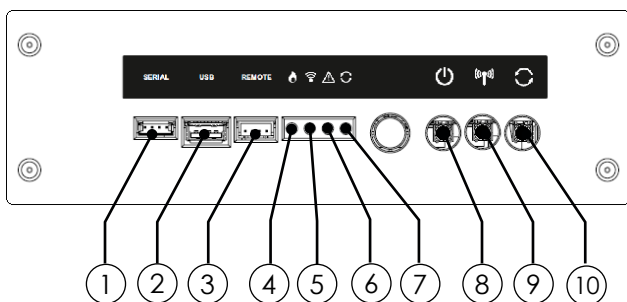


- 1 Serial connection (use by authorised staff ONLY)
- 2 USB connection (use by authorised staff ONLY)
- 3 Emergency cable connection
- 4 GREEN LED - appliance working status
- 5 YELLOW LED - remote communication in progress
- 6 RED LED - alarm on
- 7 BLUE LED - System updating in progress
- 8 Appliance switch on/off button
- 9 Receiver handheld device remote combination button
- 10 Manual upgrade button (use by authorised staff ONLY)

- 1 Increase key (selection key)
- 2 Decrease key (selection key)
- 3 ON/OFF or reset from "Sleep" mode key
- 4 Display
- 5 MENU access and confirm key
- 6 Back to previous screen key

i In "Sleep" mode, the screen of the handheld device is blacked out, only maintaining enabled, if necessary, the remote communication with the appliance, to reduce battery consumption.

8.3 DESCRIPTION OF THE HANDHELD DEVICE DISPLAY

The handheld device display is as follows:

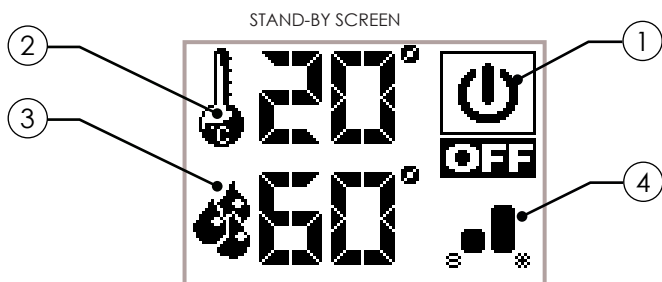

i After 20 seconds of inactivity, the display on the handheld device blacks out and passes to "SLEEP" mode, maintaining the remote connection with the appliance. The display re-enables only by pressing the (1) key.

- ① Icon indicating the status of the appliance (see "Concise icons diagram").
- ② Displays the ambient temperature detected by the handheld device. Furthermore, pressing the scroll key (↑) allows display of the temperature setting, which can be edited using the two scroll keys (↓) (↑). Confirmation of each variation takes place automatically within 3 seconds of editing the data, or by pressing the confirm key (OK). An acoustic signal confirms the change was made.




- ③ It shows boiler water actual temperature as detected by the probe placed upstream in the system. Moreover, temperature settings can be viewed by pressing (↓) and then edited by pressing the two scroll buttons (↓) (↑). Any change in temperature settings is confirmed either automatically - within 3 seconds from the last change - or by pressing (OK) button. An acoustic signal will confirm the change.



- ④ It shows power settings.



From STAND-BY mode, pressing (←) allows to obtain an overview of the actual and active device status, as shown in the following figure:

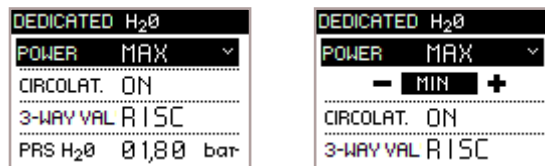

Pressing (OK) allows to edit the appliance working power by means of (↑) (↓) scroll buttons.

POWER: it shows the appliance power, which can be

- MINIMUM: minimum editable power
- MAXIMUM: maximum editable power (see specific section)
- ECO: product modulation when setting values are reached;
- SANI: indicates dedicated power – in case of need – if a rapid DHW kit is installed or either a particular system has been set.

Each time the appliance is turned on it always activates at maximum power;

PUMP: The word ON indicates that the circulator is active and is in the process of circulating water in the dwelling system.

3-WAY VALVE: Indicates the positioning of any three-way valve installed, if in the presence of DHW exchanger or DHW tank.

PRESSURE: Indicates the actual pressure of the system read by the transducer, placed on the product upstream.

8.4 FLAT BATTERIES SIGNAL

If batteries are flat, the display presents a symbol which indicates their limit status, however maintaining the functions enabled of the handheld device.

As soon as the level of the batteries does not allow any remote communication, the handheld device displays, on the full screen, the image of the flat battery, blocking all the functions connected to it until the batteries are replaced.




8.5 CONCISE ICONS DIAGRAM

①	②	③	④	MEANING
				START
				MAX. WORKING POWER
				MIN. WORKING POWER
				SANITARY MODE
	MAN			MANUAL ROOM TEMPERATURE CONTROL MODE
				ROOM TEMPERATURE SAVING MODE
				BOILER H2O TEMPERATURE SAVING MODE
				DIRECT SYSTEM + DHW STORAGE SETTING MODE
				TECHNICAL H2O STORAGE MODE
				TECHNICAL H2O STORAGE + DHW STORAGE MODE
				OPTIMIZED MODE (see specific paragraph)
				BRAZIER CLEANING (if applicable)
				ACTIVE CLEANER (cleaning and brazier emptying)
				ACTIVE COMFORT CLIMA
				RESTART FROM COMFORT CLIMA
				FINAL CLEANING
				OFF
				ALERT (see specific paragraph)
				FLAME OVERHEATING
				PELLET OVERLOAD

①	②	③	④	MEANING
				H2O STANDBY
				FAULT PRESSURE SENSOR
				FAULTY FLAME READOUT PROBE
				HANDHELD DEVICE BATTERIES IN EXHAUSTION
				REACHED LIMIT SERVICE HOURS

9 MENU BROWSING

To access the menu, press the key on the standby screen to display the selection items, as in the figure.

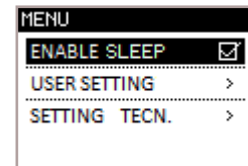


Scroll the menu items using the keys

Confirm the selection with the key

To return to the previous item, key

A practical example follows of how to execute navigation using all the selection keys.

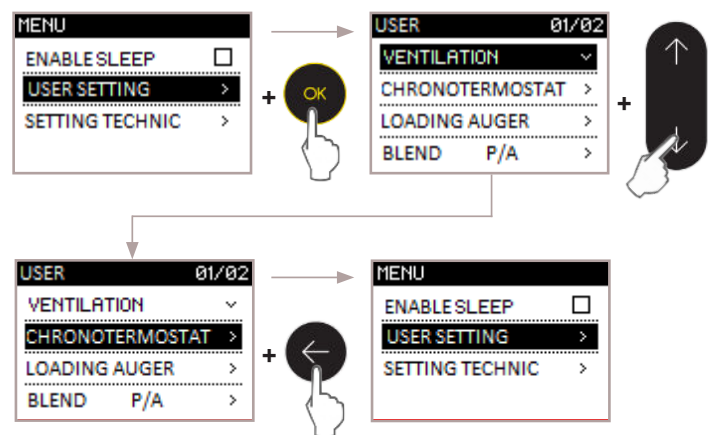

10 FIRST START-UP INSTRUCTIONS

This chapter highlights a series of operations to carry out during the first start-up phase of the appliance.

10.1 DATE AND TIME SETTING


The procedure follows to set the date and time, useful for the thermostat with timer function, on the models of the manufacturer's range.

OPERATING PROCEDURE:

MENU >> SET USER >> SETTINGS >> TIME - DATE

- Access the menu by pressing key **(OK)**
- Scroll the items to SET USER with the key **(↓)**
- Access the menu by pressing key **(OK)**
- Scroll the items to SETTINGS with the key **(↓)**
- Access the menu by pressing key **(OK)**
- Scroll the items to TIME-DATE with the key **(↓)**
- On the TIME - DATE menu item, key **(OK)**

The screen appears to adjust the time and calendar as in the figure below.

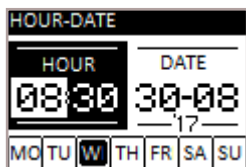

- Edit the data highlighted using the keys **(↑)** **(↓)**
- Confirm the data changed using the key **(OK)**
- Repeat the operation to complete the settings.
- During editing, remember that:
 - to return to the previous data, without saving the last data changed, press the key **(←)**
 - if you intend changing a single datum, having terminated the change, press the key **(OK)** multiple times until you exit the function described in the paragraph.

To return to the STAND-BY screen, use the key **(←)**, repeating the operation multiple times.

10.2 PROBE ADJUSTMENTS

The following procedure explains how to calibrate all probes, should the value differ from the reading of a reference standard thermostat.

OPERATING PROCEDURE:

MENU >> USER SETTINGS >> SETTINGS >> PROBE CALIBRATION

- Access menu by pressing **(OK)**
- Scroll down entries to select USER SETTINGS using **(↓)**
- Access menu by pressing **(OK)**


By pressing **(↓)**, scroll down entries to select SETTINGS

Access the menu by pressing **(OK)**

Scroll down entries **(↓)** to select PROBE ADJUSTMENTS

Press **(OK)** to access PROBE ADJUSTMENTS

The probe adjustment screen will appear as in the figure below.

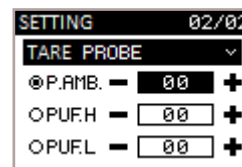

Adjust the highlighted value by pressing **(↑)** **(↓)**
 Example: the reference thermostat displays 21°C, while the controller displays 19°C.
 Set +2 to display 21°C on the controller.

Confirm your change by pressing **(OK)**

To go back to the STAND-BY screen, press **(←)** button repeatedly.

10.3 ROOM TEMPERATURE SETTING

The ambient temperature defines the temperature you want to obtain in the premises where the product is installed.

From the STAND-BY screen, key **(↑)** to select the value;

The values vary from 7°C to MAN (with the MAN value it is intended that, once set, the appliance NEVER goes to power save).

Edit the value with the keys **(↑)** **(↓)**

Confirm the new setting with the key **(OK)** or wait 3 seconds for auto-confirm.

10.4 FIREPLACE POWER SETTING

The fireplace power defines the quantity of heat produced by the appliance, this implies a different fuel consumption. Basically, it is used to speed up the useful time to reach the ideal temperature, set for the premises where the product is installed.

From the STAND-BY screen, key **(↓)** to select the power;


The values vary from 1 to 7;

Edit the value with the keys **(↑)** **(↓)**

Confirm the new setting with the key **(OK)** or wait 3 seconds for auto-confirm.

i Each time the appliance is turned on, it ALWAYS turns on at maximum power to guarantee the greatest amount of heat to the heating system.

10.5 SWITCHING ON/OFF THE PRODUCT


To switch on the product, prolonged press the key  until the following screen appears, followed by an acoustic signal.



This screen remains on for the following machine statuses;

- SWITCH ON** • Initial phase of pellet loading;
- WAITING FLAME** • Flame development waiting phase;
- FLAME PHASE** • Stabilisation phase of flame and oxidiser inside the brazier;

The appearance is highlighted of the "flame" symbol with the writing ON, without displaying the work power.

Prolonged pressing of the key  accompanied by acoustic signalling causes switching off of the product, as well as resetting of any alarms.



i For models with an automatic cleaner, during the switch on phase, the product activates a brazier cleaning phase before passing to SWITCH ON. In the event of FAILED IGNITION, after pressing the button, a POP UP signals the need to suck the pellet from the brazier before turning the appliance back on, thus avoiding discharge of unburned pellets into the ash drawer.

! Always vacuum the brazier using an ash cleaner, risk of fire.

i During first start-up of the product, unpleasant odours may occur or smoke caused by evaporation or drying of certain materials used. This phenomena disappears after some hours of use. During this period, you are advised to keep the premises well ventilated.

11 WORKING PHASE

Products in the range include a working phase with 2 operating powers. Once the room-temperature setting values - if set - are reached, the appliance will behave as follows.

11.1 SAVING MODE

During working phase, the appliance operates so as to reach room-temperature and boiler-water values as they have been set by the User; once such conditions are fulfilled, power will be decreased until ECONOMY mode is enabled, a phase in which fuel consumption is at its lowest.

ECONOMY mode screen when desired room temperature is reached:



ECONOMY mode screen when desired Boiler water setting is reached:



ECONOMY mode screen with both settings reached:



11.2 CLIMA COMFORT FUNCTION

As described in the "saving mode" paragraph, the appliance has the objective of meeting the comfortable heating requirements of the user. The function which can be enabled, linked to his mode, also ensures, if the home has a good energy class, a fuel saving through intelligent switch off of the product (reaching or required of the desired setting).

The procedure follows to enable the function, the change of values with relevant meaning, a practical example of setting.

OPERATING PROCEDURE:

MENU >> SET USER >> AIR CON. COMFORT

Access the menu by pressing key **OK**


Scroll the items to SET USER with the key **↓**

Access the menu by pressing key **OK**

Scroll the items to CLIMA COMFORT, key **↓**

On the CLIMA COMFORT menu item, key **OK**

The screen for activating the function with its setting/adjustment entries will appear.

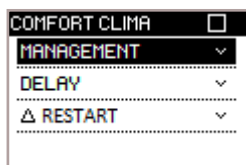

Activate/deactivate this function by pressing **OK** to visualize whether the checkmark has been added or removed and:


- Go back to USER SETTINGS by pressing **←**.

OR

- By pressing **↓**, go to the item selection to make any changes to the function.

Press **OK** to access the adjustment screen.

Press **↑**/**↓** to make changes and press **OK** to confirm.

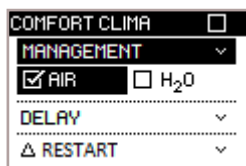Function settings (room temperature or boiler H₂O)


It allows to activate the product shutdown when ARIA room-temperature or WATER boiler settings are reached (at the user's own discretion).

Delayed shutdown



Time needed to determine whether the set temperature (room temperature/boiler H₂O) remains constant before shutdown.

Delta restart

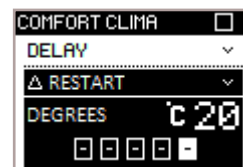

This setting determines the temperature gradient according to which the appliance must restart.

While modifying parameters above, just press **←** to go back to the previous entry without saving.

To go back to the STAND-BY screen, press **←** button repeatedly.

STATUS SCREEN:

To see the shutting down of the appliance while in COMFORT CLIMA mode, screen **①** must be displayed.

To see that the appliance is about to start in COMFORT CLIMA mode, screen **②** must be displayed.



PRACTICAL EXAMPLE:

How to manage comfort on ARIA

Set room temperature at 21°C;

Set 3 minutes for the saving mode;

Set the temperature you wish the appliance to restart at 2°C lower than the previously set value.

The appliance will shut down as soon as room temperature reaches the set value + 3 minutes in saving mode.

The product will restart when a temperature of 18°C (with a tolerance of, i.e. 21°C - 2°C - 0,5°C) is detected. It is also possible to activate this function by using an external thermostat, bearing in mind that this does not include the hysteresis value.

i You are advised to use an external thermostat with its hysteresis value settable up to a maximum of 3°C. Operation of the appliance could start the switch on and off phase many times during the day; this could compromise the duration of switch on resistance.

11.3 H₂O STANDBY

"H₂O Standby" mode is activated when water temperature reaches 85°C; this function takes over to protect the circuit, especially when no COMFORT CLIMATE function is activated on the boiler H₂O. The appliance will restart automatically after cooling down, provided that a power-on request is set. (i.e.: room temperature request).


11.4 VENTILATION MANAGEMENT (if applicable)

The products in the range equipped with a ventilation system have can heat the environment where they are installed not only through the heat generated by the glass, but also through their specific fan.

OPERATING PROCEDURE:



```
MENU >> USER SETTINGS >> VENTILATION
```

- Access menu by pressing **(OK)**
- Scroll down entries to select USER SETTINGS using **(↓)**
- Access menu by pressing **(OK)**
- Press **(OK)** on "VENTILATION" (first menu entry)
- The screen with the ventilation adjustment will appear as shown in the figure below.

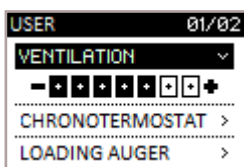

- Change ventilation power by pressing **(↑) (↓)**
- 0 – ventilation deactivated;
- 1-7 – ventilation power range
- Confirm by pressing **(OK)** button.
- To go back to the STAND-BY screen, press the **(←)** button repeatedly.

i Upon request to your technician, ventilation can be thermostated so as to turn it off - once the temperature in the room where the product is installed has been reached - by means of the remote control and using only an external thermostat for the device environmental management.

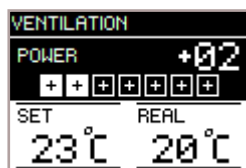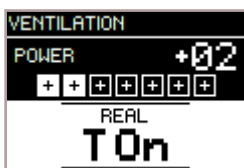

12 DESCRIPTION OF THE MENU FUNCTIONS

This chapter describes the user menu functions, useful to improve some comfort related aspects of the user and/or operation of the product.

12.1 THERMOSTAT WITH TIMER FUNCTION


With the Thermostat with timer function, you can: program for each day of the week automatic switch on and off of the product, with 4 independent time intervals (PROGRAM 1 - 2 - 3 - 4). The steps are outlined below to follow, starting with the STAND-BY screen, to access the relevant menu.

OPERATING PROCEDURE:

```
MENU >> SET USER >> THERMOSTAT TIMER
```

- Access the menu by pressing key **(OK)**
- Scroll the items to SET USER, key **(↓)**
- Access the menu by pressing key **(OK)**
- Scroll the items to THERMOSTAT TIMER, key **(↓)**
- Access the function with the key **(OK)**

The screen appears with activation of the function and the possibility of selecting 4 TIMED setting programs, as in the figure.

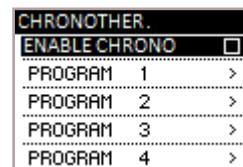

Enable/disable the function with the key **(OK)** to display the addition or bypassing of the tick and:

- Return to SETUSER with the key **(←)**.
- OR
- Pass, using the key **(↓)**, to the choice of program to set, before accessing with the key **(OK)** to change it.

If you want to access 1 of the 4 programs, the screen presented is as follows:



Edit the switch on and switch off times, as well as enabling the days of the week, keys \uparrow \downarrow . Confirm each data change using the key OK and pass to the second screen of the TIMER program.

The screen in the figure below shows setting options for both desired room temperature and maximum boiler-water temperature during the activation of the time frame $\textcircled{1}$. It is also possible to control the ventilation speed (if applicable) $\textcircled{2}$.



Edit the values using the keys \uparrow \downarrow

Confirm each data change using the key OK until you exit the program.

During editing, remember that:

- to return to the previous data, without saving the last data changed, press the key \leftarrow
- if you intend changing a single datum, having terminated the change, press the key OK multiple times until you exit the following function.

To return to the STAND-BY screen, use the key \leftarrow , repeating the operation multiple times.

12.2 AUGER LOADING FUNCTION

The following function is necessary to facilitate the switch on phase of the appliance, after accurate cleaning was conducted of the hopper (pellet container) to remove sawdust which, over time, is created on the base. See the chapter "Routine maintenance of the product".

Also check you have placed pellets in the tank and that the appliance is in the "OFF" or "FINAL CLEANING" status before starting the function.

The number expressed in seconds indicates the rotation time of the auger during the loading phase.

After this time is up, the auger stops automatically, after which the appliance can switch on.

OPERATING PROCEDURE:

MENU >> SET USER >> AUGER LOADING

Access the menu by pressing key OK


Scroll the items to SET USER with the key \downarrow

Access the menu by pressing key OK

Scroll the items to AUGER LOADING, key OK

Access the function by pressing key OK

The cleaner activates (for models with automatic cleaning), after which pellet loading is enabled. The display shows the time that passes up to 0, corresponding to loading switch off.

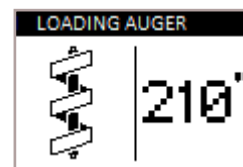

The appliance, at the end of loading, goes to the SET USER screen.

i After the initial loading phase, a appears POPUP which indicates to suck the pellet from the brazier. This operation does not allow emptying the pellets in the ash drawer when the plate is rotated during ignition.

! Always vacuum the brazier using an ash cleaner, risk of fire.

12.3 PELLETS/EXTRACTION MIX

The PELLETS-EXTRACTION mix setting allows you to change, with immediate effect, the quantity of pellets loaded in the brazier and the quantity of air inbound of the product, tested and inspected with DIN PLUS certified pellets. If you use other pellets or uncertified pellets, combustion may need to be adjusted. Normally, the change is executed on the EXTRACTION percentage to improve combustion; if oxygen adjustment is not efficient, you may need to also change the percentage of PELLETS falling.

OPERATING PROCEDURE:

MENU >> SET USER >> P/E MIX


Access the menu by pressing key OK

Scroll the items to SET USER, key \downarrow

Access the menu by pressing key OK

Scroll the items to P/E MIX with the key OK


Access the function by pressing key OK

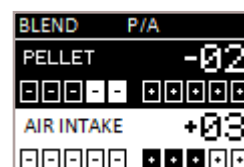

Edit the pellet setting with the keys

The values vary from -5: reduction in pellet load in %
to +5: increase in pellet load in %

Confirm by pressing the key and pass to edit extraction.

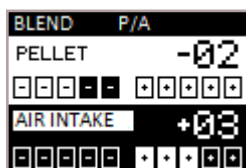

Edit the extraction setting, keys

The values vary from -5: reduction in extraction in %
to +5: increase in extraction in %

Confirm by pressing the key and exit adjustment to return to the SET USER screen.

As for example outlined above, a percentage of -2 PELLET and +3 EXTRACTION was set; this kind of setting results from the fact combustion is lacking oxygen and the pellets are small in size compared to the average 2cm.

During editing, remember that:

- to return to the previous data, without saving the last data changed, press the key
- if you intend changing a single datum, having terminated the change, press the key multiple times until you exit the function described in the paragraph.

To return to the STAND-BY screen, use the key , repeating the operation multiple times.

The number indicated, for setting change, refers to a percentage change which acts on the default parameters set on the electronic board, this only affects the work phase. These values should be changed in the event of poor combustion, due in many cases to use of pellets different from those used for testing the appliance.

12.4 STOVE STATUS

This function allows you to check the most important parameters are working properly on the appliance. Two screens are outlined below which show the list of real data of the product, useful for the support service during the control phases.

OPERATING PROCEDURE:

MENU >> SET USER >> STOVE STATUS


Access the menu by pressing key

Scroll the items to SET USER with the key

Access the menu by pressing key






Scroll the items to STOVE STATUS with the key

Access the function by pressing key

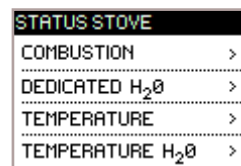

Select the type of screen you want to display, with the keys

Access the relevant screen with the key

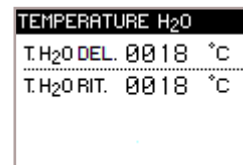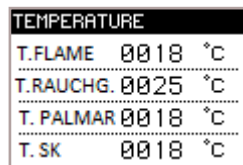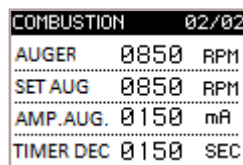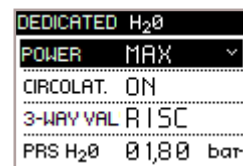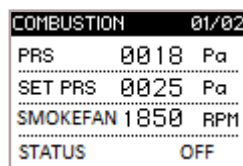

To return to the SET USER screen, press the key

To return to the STAND-BY screen, use the key , repeating the operation multiple times.

12.5 ENABLE EXTERNAL THERMOSTAT

The following paragraph specifies how to enable the function that includes use of the external thermostat instead of the handheld device, to manage the ambient temperature. Re-connecting to the paragraph called "CONFIGURATION OF T.EXT THERMOSTAT", the procedure is illustrated below for reading the device by the electronic board.

OPERATING PROCEDURE:


MENU >> SET USER >> SETTINGS >> ENABLE T.EXT

Access the menu by pressing key



Scroll the items to SET USER with the key


Access the menu by pressing key

Scroll the items to SETTINGS with the key 

Access the menu by pressing key 

The first item on the menu, ENABLE T.EXT.



Tick using the key  if you want to manage the ambient temperature with the external thermostat (not supplied) .

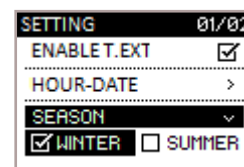


Select season by pressing  



Press  to confirm season and visualize the checkmark.

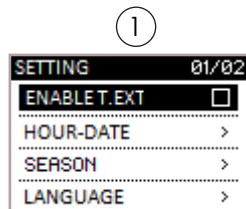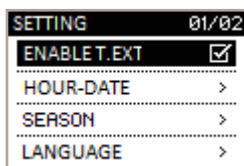Press the  button repeatedly to go back to the STAND-BY screen.



To return to the STAND-BY screen, use the key  repeating the operation multiple times.

The STAND-BY, instead of the ambient temperature detected and settable, displays:

- string T ON if the room in which the thermostat is installed has not yet reached the temperature required; 
- the writing T OFF if in the room the ambient temperature is reached. 



12.6 SEASON

This function controls the blocking of the three-way valve for the advanced diagrams, thus preventing hot water from being supplied to the heating system in the presence of DHW storage tank (with SUMMER settings).

OPERATING PROCEDURE:

MENU >> USER SETTINGS >> SETTINGS >> SEASON

Access menu by pressing 

Scroll down entries to select USER SETTINGS using 

Access menu by pressing 

Scroll down entries to select SETTINGS by pressing 

Access menu by pressing  button

Scroll down entries to select SEASON by pressing 

Access function by pressing  button

12.7 LANGUAGE


Based on the destination country or the user acquiring the product, this function includes a series of languages to set. The procedure follows to choose the desired language.

OPERATING PROCEDURE:

MENU >> SET USER >> SETTINGS >> LANGUAGE

Access the menu by pressing key 

Scroll the items to SET USER with the key 

Access the menu by pressing key 

Scroll the items to SETTINGS with the key 


Access the menu by pressing key 


Scroll the items to LANGUAGE with the key 

Access the function by pressing key 



Select the language by pressing the keys  

Confirm the language with the key  and display the tick sign.

To return to the STAND-BY screen, use the key , repeating the operation multiple times.

12.8 CONTRAST

The procedure follows to improve screen display if the graphic does not show the proposed information clearly.

OPERATING PROCEDURE:

MENU >> SET USER >> SETTINGS >> CONTRAST

Access the menu by pressing key 

Scroll the items to SET USER with the key 

Access the menu by pressing key **OK**


Scroll the items to SETTINGS with the key **↓**

Access the menu by pressing key **OK**

Scroll the items to CONTRAST, key **↓**

On the function item, press with key **OK**

The screen appears to adjust contrast relating to the handheld device graphic, as in the figure.

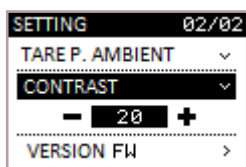

Edit the data highlighted using the keys **↑****↓**

Confirm the data changed using the key **OK**

To return to the STAND-BY screen, use the key **←**, repeating the operation multiple times.

12.9 FIRMWARE VERSION

To view the version of the firmware installed for the appliance model supplied, follow the procedure in this paragraph. This function is useful for the support centre to control availability of the new updates to install on the product, if necessary.

OPERATING PROCEDURE:

MENU >> SET USER >> SETTINGS >> FW VERSION

Access the menu by pressing key **OK**

Scroll the items to SET USER with the key **↓**


Access the menu by pressing key **OK**

Scroll the items to SETTINGS with the key **↓**

Access the menu by pressing key **OK**

Scroll the items to FIRMWARE VERSION with the key **↓**

Access the function by pressing key **OK**

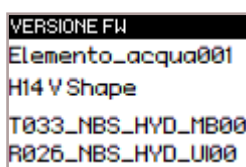

To return to the STAND-BY screen, use the key **←**, repeating the operation multiple times.

12.10 ANTICONDENSATION (exhaust fumes temperature)

This function ensures that the temperature of exhaust gases remains higher than condensing temperature.

i The function results in a slight increase of pellet consumption to remedy this condition. The causes of condensation can be related to the installation but above all to the yield of the pellets and its size.

OPERATING PROCEDURE::

MENU' >> SET USER >> SETTINGS >> ANTICONDENSATION

Access the menu by pressing key **OK**

Scroll the items to SET USER with the key **↓**

Access the menu by pressing key **OK**

Scroll the items to SETTINGS with the key **↓**

Access the menu by pressing key **OK**

Scroll the items to ANTICONDENSA with the key **↓**

Activate / Deactivate function by pressing

of the key **OK**



To return to the STAND-BY screen, use the key **←**, repeating the operation multiple times.

12.11 SLEEP FUNCTION (TURBULATORS)


The appliance belonging to the ACQUA range is equipped with an autonomous tube-bundle cleaning system, which acts by moving the turbulators inside of it. This function can be activated to inhibit its activity during night-time operation. A deactivation time frame is set by default from 10.00 PM to 8.00 AM the following day.

OPERATING PROCEDURE:

MENU >> ENABLE SLEEP

Access menu by pressing **OK**

Activate/deactivate SLEEP mode by pressing **OK**

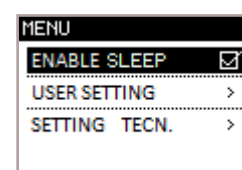


To go back to the STAND-BY screen, press  button repeatedly

i The turbulators are activated automatically each time the appliance is switched on/off and by means of a timer during operation. It never occurs when the machine is not active.

GENERAL INFORMATION NOTE:

When you pass from one screen to another, you display the following screen for a few seconds:

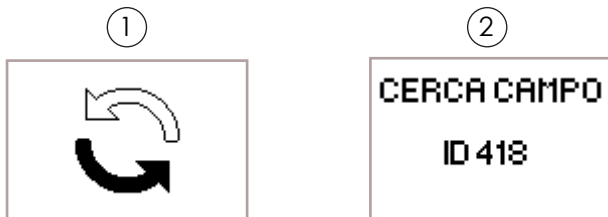

This screen indicates the handheld device is trying to communicate with the appliance, a useful operation to recover information to display to the end user. **1**

If communication is absent, the writing FIELD followed by a number appears. In this case, simply approach the appliance to re-establish communication. **2**

13 ADVANCED HYDRAULIC DIAGRAMS


This paragraph describes the behavior of the remote control when a system diagram different from the standard one (that is, when the device is operating directly with the heating system) is activated. Activating such diagram (operation reserved for a specialized technician), while maintaining the same menu functions, the screen adapts to the display of all connected utilities, such as the DHW storage tank temperature or the technical H₂O storage tank.





i In case the type of system diagram designed requires the management of the 3-way valve (diagram 1 and 3), it is necessary to purchase an optional kit at a Nobis authorized sales point or technician.



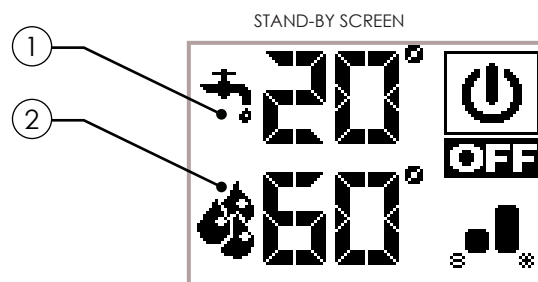

13.1 DIAGRAM 01 (DHW TANK + HEATING)

The following diagram can be used when a boiler without a plate heat exchanger is in use and the User wants to buy an accumulator (boiler) to be connected to the circuit, in order to produce domestic hot water. In this kind of circuit, the room temperature is managed by the remote control which, having a radio connection, acts as a remote chronothermostat.

The DHW storage is managed by the appliance thanks to a contact or immersion probe (not provided) to be connected on the back side of the product. The new stand-by screen is shown below.



1 It shows the DHW storage temperature as detected by the probe. Temperature settings – editable by pressing   – can be shown by pressing  scroll buttons. Any change in temperature settings is confirmed either automatically - within 3 seconds from the last change – or by pressing  button. An acoustic signal will confirm the change.

2 It shows boiler water actual temperature as detected by the probe. Moreover, temperature settings – editable by using   – can be shown by pressing  scroll buttons. Any change is confirmed either automatically - within 3 seconds from the last change – or by pressing  button. An acoustic signal will confirm the change.

The operation is the same as the one described in the basic diagram, with the only difference that, here the product exchanges directly in the DHW storage (priority); when the set temperature is reached, the three-way valve changes its position and the appliance begins to exchange in the heating circuit. From this moment on, heating can be managed by using the remote control to set the room temperature as well as H₂O temperature (see diagram 00 operation related to modulation, eco stop, etc.). The three-way valve redirects itself to the DHW storage when:

- it is required by the storage tank itself;
- it is required by the flow switch (optional, if connected)


From ECOSTOP or H₂O STANDBY status, the product restarts considering heating or DHW accumulator settings.

i By setting SUMMER mode, the three-way valve remains fixed, allowing heat produced by the appliance to be transferred only inside the DHW storage tank. As soon as this condition is reached, the product switches to ECO STOP mode.

13.2 DIAGRAM 02 (TECHNICAL H₂O STORAGE TANK)

In this type of circuit, technical H₂O storage tank is managed by the product thanks to a contact or immersion probe (not provided) to be connected to the back side of the appliance.

The new stand-by screen is shown below.

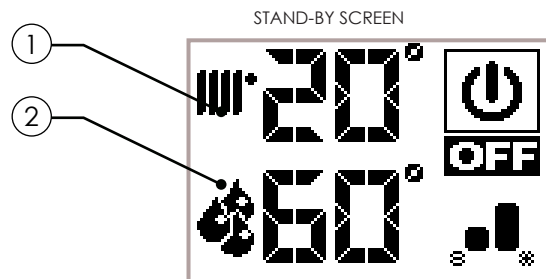

- ① It shows the technical water storage tank temperature as detected by the probe. Temperature settings – editable by pressing \downarrow \uparrow – can be shown by pressing \uparrow scroll button. Any change in temperature settings is confirmed either automatically - within 3 seconds from the last change – or by pressing OK button. An acoustic signal will confirm the change.


- ② It shows the boiler water temperature as detected by the probe. Temperature is not editable.

The operation is the same as the one of the basic diagram, with the only difference that, with this diagram, the product exchanges directly in the technical water storage tank. As soon as the set temperature is reached, the appliance switches to ECOSTOP status and then restarts if the temperature drops below a re-ignition value (Delta restart settable by the installer at time of testing).

13.3 DIAGRAM 03 (DHW + TECHNICAL H₂O STORAGE TANKS)

The following diagram combines the functions of the other diagrams described previously and is suggested to those having a technical water storage tank (hot water tank) without the internal coil for domestic water use. In this type of circuit, the DHW storage tank is managed by the appliance by means of a contact or immersion probe (not provided) to be connected on the back side of the product. The same applies for the management of H₂O storage where the appliance manages the heating by means of a contact or immersion probe (not provided), always to be connected on the back side of the product.

The new stand-by screen is shown below.

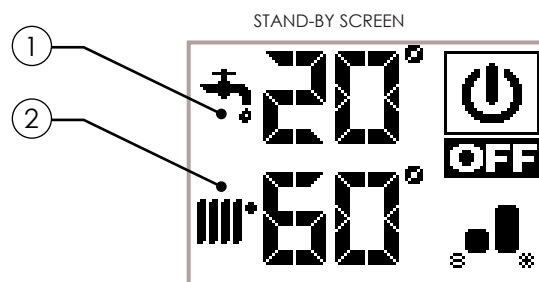

- ① It shows the DHW storage tank temperature as detected by the probe. Temperature settings – editable by pressing \downarrow \uparrow – can be shown by pressing \uparrow scroll button. Any change in temperature settings is confirmed either automatically - within 3 seconds from the last change – or by pressing OK button. An acoustic signal will confirm the change.

- ② It shows the technical water storage tank temperature as detected by the probe. Temperature settings – editable by pressing \downarrow \uparrow – can be shown by pressing \uparrow scroll button. Any change in temperature settings is confirmed either automatically - within 3 seconds from the last change – or by pressing OK button. An acoustic signal will confirm the change.

The operation is the same as the one of the basic diagram, with the only difference that, with this diagram, the product exchanges directly in the DHW storage tank (priority); when the set temperature is reached, the three-way valve changes its position and the appliance begins to exchange in the technical water storage (hot water tank). As soon as the set temperature is reached, the appliance switches to ECOSTOP status and then restarts if the temperature drops below a re-ignition value (Delta restart settable by the installer at time of testing).










The three-way valve redirects itself again to the DHW storage tank when:

- it is required by the storage tank itself;
- it is required by the flow switch (optional, if connected)





From ECOSTOP or H₂O STANDBY status, the product restarts considering the requests of one of the two storage tanks.

i By setting SUMMER mode, the three-way valve remains fixed, allowing heat produced by the appliance to be transferred only inside the DHW storage. As soon as this condition is reached, the product switches to ECO STOP mode.






14 PHASES OVERVIEW

PHASE	DESCRIPTION
 START WAITING FOR FLAME FLAME PHASE	<p>-The resistor preheating phase starts and pellet begins to fall into the brazier.</p> <p>- Pellet ignites by means of the incoming hot air passing through the conduit of the glowing resistor.</p> <p>- A further pellet load help develop the flame.</p>
 OPERATING	<p>The appliance has carried out the ignition phase and reaches the working power as per settings.</p>
 ECO	<p>The desired room temperature has been reached.</p>
 ECO	<p>The set maximum boiler-water temperature has been reached.</p>
 BRAZIER CLEANING	<p>The brazier cleaning phase is active without the cleaner being moved (periodic function).</p>
 ACTIVE CLEANER	<p>The active brazier cleaning phase is on. The appliance will shutdown and restart automatically.</p>
 RESTART	<p>Restart is required after cooling. Once such condition is achieved, the appliance will start automatically.</p>
 FINAL CLEANING	<p>The appliance is preparing for shutdown and the cooling phase has not finished yet.</p>
 OFF	<p>The appliance is OFF and all engines are deactivated.</p>





15 FUNCTIONS OVERVIEW



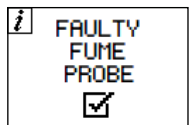
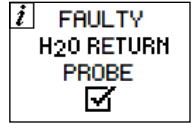


PHASE	DESCRIPTION
 MAN OPERATION	<p>Room temperature set on MAN mode. In this case the appliance will operate only when firebox power is set (it NEVER switches to eco mode).</p>
 THERMOSTAT	<p>Room temperature control by an external thermostat (not supplied by the manufacturer) has been chosen.</p>
 COMFORT CLIMA	<p>When Comfort Clima is active, the product will shut down automatically as soon as all setting values are reached. (see specific paragraph).</p>
 OPTIMA FLAME	<p>The appliance optimizes combustion by reducing the pellet load, while still guaranteeing its performance.</p>


16 ALERTS OVERVIEW


PHASE	DESCRIPTION
 AL-05 ALARM	<p>The appliance is in alarm status. Please check the "ALARMS" chapter for more information.</p>
 ANOMALY	<p>The appliance reports an anomaly without shutting down. See "17 ANOMALIES OVERVIEW".</p>
 BATTERY 10%	<p>Batteries in the remote control have a low level of energy.</p>
 HRS SERVICE	<p>The set threshold of running hours has been reached. We recommend to request an extraordinary maintenance service by authorized personnel.</p>
 H₂O STANDBY	<p>Forced shutdown when H₂O temperature reaches 85 °C. The product restarts automatically if restart conditions occur.</p>

17 ANOMALIES OVERVIEW

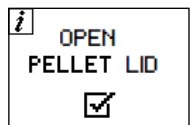FASE	DESCRIZIONE
 S.PRESSIONE GUASTO	The appliance signals a malfunction of the sensor controlling correct combustion. For safety purposes, while waiting for the technician, the appliance is set to saving mode.
 HOT FUMI	The maximum smoke temperature threshold has been reached; the appliance for a period sets to saving mode with ventilation at maximum power to cool the body.
 CARICO ECCESSIVO	If the quantity of pellets is high for the power of the machine. In P/E mix, reduce the pellet load working on the % (see specific paragraph)
 S.FIAMMA GUASTA	The appliance signals a malfunction of the probe detecting the flame. For safety purposes, while waiting for technical intervention, the appliance sets to saving mode.

FASE	DESCRIZIONE
 OPEN PELLET LID	The anomaly is presented when the user opens the door or ash pan or pellet door; at this point, pellet loading inside the brazier stops and the electronics emit an acoustic signal. The user, to return to correct operation, must close the doors. If this operation is not carried out, the product signals an alarm.
 DOOR / ASH DRAWER OPEN	
 FAULTY FUME PROBE	Anomaly of the probe controlling the temperature of the discharge smoke, contact the authorised technician to solve the fault.
 FAULTY H2O RETURN PROBE	Anomaly to the probe monitoring the system return H ₂ O temperature: contact the authorized technician to resolve the malfunction.
 FAULTY ACC H2O SANIT PROBE	Anomaly to the probe monitoring the water temperature in the DHW storage tank (Boiler); please, contact an authorized technician to solve the problem.
 FAULTY ACC H2O TECH H. PROBE	Anomaly to the upstram probe monitoring the water temperature in the technical water storage tank (hot water tank); please contact an authorized technician to solve the problem.

 The anomalies, differing from alarms, are signals which automatically reset, once the cause that generated them has been eliminated. Furthermore, the signalling does not cause the appliance to switch off, guaranteeing however heating.

 Some anomalies, to be resolved, need technical intervention by authorised staff. Despite the appliance continuing to work, the user must ensure the problem is resolved. **Negligence causes the product to malfunction.**

18 DESCRIPTION OF ALARMS

ALARM CODE	REASON
01 BLACK OUT	No power during the work phase
	SOLUTION
	Press the switch off key and repeat switch on of the appliance If the problem persists, contact the Support Service.

ALARM CODE	REASON
02 NO SWITCH ON	The pellet tank is empty.
	Calibration of the pellets and suction during the start-up phase inadequate.
	Ignition resistor faulty or out of position
	SOLUTION
Check there are pellets in the tank. If necessary, load. If the problem persists, contact the Support Service	

ALARM CODE	REASON
03 PELLETS FINISHED	The pellet tank is empty.
	The gearmotor is not loading pellets
	Lack of pellets loading
	SOLUTION
	Check there are pellets in the tank. If necessary, load Empty the tank to check that there are no objects inside it. Adjust, by increasing the load of pellets, from "P/E MIX" If the problem persists, contact the Support Service

ALARM CODE	REASON
04 SMOKE TEMPERATURE	Combustion in the brazier is not optimal as it is clogged or the inner passages of the appliance are clogged.
	The tangential fan (if present) is not working properly or is damaged.
	SOLUTION
	Switch the product off and back on again, activating the cleaner; adjust the combustion with the "P/E mix".
	If the problem persists, contact the Support Service

ALARM CODE	REASON
05 EXTRACTOR ROTATIONS NOT RESPECTED	The rotations of the smoke extractor show a loss of efficiency due to obstruction of the fan or a drop in voltage.
	SOLUTION
	If the problem persists, contact the Support Service

ALARM CODE	REASON
06 FAULTY SMOKE EXTRACTOR	No power supply to the smoke extractor
	The smoke extractor is blocked
	SOLUTION
	If the problem persists, contact the Support Service

ALARM CODE	REASON
07 GEARMOTOR ROTATIONS NOT RESPECTED PELLET LOADING	The rotations of the gearmotor present a loss of efficiency due to a drop in voltage.
	SOLUTION
	If the problem persists, contact the Support Service

ALARM CODE	REASON
08 PELLET LOADING GEARMOTOR FAULT	Gearmotor encoder not working or not connected correctly
	No power to gearmotor
	SOLUTION
	If the problem persists, contact the Support Service

ALARM CODE	REASON
09 PELLET LOADING AUGER BLOCKED	Possible foreign body or sawdust preventing correct movement.
	SOLUTION
	Empty the tank and check for foreign bodies.
	If the problem persists, contact the Support Service


ALARM CODE	REASON
10 PELLET LOADING AUGER POWER SUPPLY DEFECT	No power supply or power supplied by electronic control unit not correct
	SOLUTION
	If the problem persists, contact the Support Service

ALARM CODE	REASON
11 MINIMUM PRESSURE PASCAL	The sensor does not detect negative air pressure inbound of the appliance.
	SOLUTION
	Check the door and ash pan are closed correctly, check if the air intake tube is obstructed.
	If the problem persists, contact the Support Service.

ALARM CODE	REASON
12 BRAZIER CLEANER FAULT	The cleaner has not completed movement and is not found in the correct position or the fire door is not closed correctly.
	SOLUTION
	Check if the door is closed correctly, reset the alarm and wait for the product to go to OFF status. Disconnect and reconnected current, the system re-activates the cleaner, checking the correct position again.
	If the problem persists, contact the Support Service

ALARM CODE	REASON
13 NEGATIVE PRESSURE IN CHIMNEY FLUE	The chimney flue is blocked.
	The sensor reading the negative pressure is not working properly.
	SOLUTION
	Check the chimney flue is not blocked, contact a chimney sweep to clean it.
	If the problem persists, contact the Support Service

ALARM CODE	REASON
14 THERMOSTAT MANUAL RESET	You have to manually reset the thermostat connected to the hopper.
	Combustion in the brazier is not optimal as the brazier is clogged or the inner passages of the appliance are clogged.
	Ventilation, where present and active, may not be working properly.
	SOLUTION
	Reset the thermostat by pressing the button on the back of the appliance.
	Switch off the product, switch on the system again to activate the cleaner and adjust combustion with the P/E mix.
	If the problem persists, contact the Support Service.

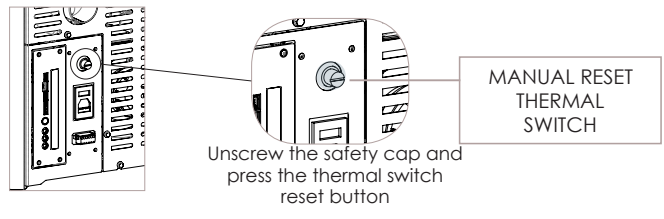MANUAL RESET THERMAL SWITCH POSITION	
	
ALARM CODE	REASON
15 FIRE DOOR/ ASH PAN OPEN	During the cleaning phase of the product, the door to the fire or the ash pan was not closed properly.
	SOLUTION
	Check correct closure of the fire door and/ or correct insertion of the ash pan in its compartment. If the problem persists, contact the Support Service
ALARM CODE	REASON
16 PELLET TANK DOOR OPEN	During the pellet loading phase of the product, the tank door was not closed properly.
	SOLUTION
	Check the pellet tank door is closed properly. If the problem persists, contact the Support Service
ALARM CODE	REASON
18 FLAME PROBE	Simultaneous flame probe and smoke probe fault.
	SOLUTION
	Contact Technical Support.
ALARM CODE	REASON
19 MINIMUM H ₂ O PRESSURE	System pressure is less than 0.5 bar (a cold circuit pressure of about 1 bar is recommended).
	SOLUTION
	Fill the system to bring the pressure back to the required value for a proper functioning. If the problem persists, please contact the Assistance Service.
ALARM CODE	REASON
20 MAXIMUM H ₂ O PRESSURE	System pressure is more than 2.5 bar (a cold circuit pressure of about 1 bar is recommended).
	SOLUTION
	Vent the system to bring the pressure back to the required value for a proper functioning. If the problem persists, please contact the Assistance Service.
CODICE ALLARME	MOTIVAZIONE
21 TEMPERATURA H ₂ O CALDAIA	La temperatura H ₂ O caldaia, posta in mandata all'impianto, supera i 90°C
	RISOLUZIONE
	Rivolgersi al Servizio di Assistenza.

ALARM CODE	REASON
22 FLAME TEMPERATURE	Combustion in the brazier is not optimal as the brazier is clogged or the inner passages of the appliance are clogged.
	The tangential fan (if present) is not working properly or is damaged.
	SOLUTION
	Switch the product off and back on again, activating the cleaner; adjust the combustion with the "P/E mix". If the problem persists, contact the Support Service

ALARM CODE	REASON
23 AUGER TRIAC	Anomaly of an internal component of the electronic board that manages the pellet loading auger.
	Possible drops in voltage or wrong voltage input to the device.
	SOLUTION
	Check power supply voltage. If the problem persists, contact the Support Service

ALARM CODE	REASON
24 AUGER PHASE	No connection of cabling that brings power to the auger gearmotor.
	SOLUTION
	If the problem persists, contact the Support Service

ALARM CODE	REASON
25 BOILER H ₂ O FAILURE	The upstream boiler H ₂ O probe does not work properly.
	The boiler H ₂ O probe is disconnected from the electronic board.
	SOLUTION
	Please contact the Assistance Service.

ALARM CODE	REASON
26 PUMP PWM ARREST	The pump impeller is blocked, unscrew the front screw and activate the impeller manually.
	SOLUTION
	If the problem persists, contact the Support Service

ALARM CODE	SOLUTION
27 PUMP FAILURE	The pump does not work properly or cannot start.
	SOLUTION
	If the problem persists, contact the Support Service

CODICE ALLARME	MOTIVAZIONE
28 REVOLUTION FAILURE SMOKE ENCODER	Smoke extractor encoder not working or not connected correctly
	RISOLUZIONE
	If the problem persists, contact the Support Service

CODICE ALLARME	MOTIVAZIONE
29 CYCLE LIMIT CLEANING	The maximum limit of cleaning cycles allowed during a work phase has been reached prolonged.
	RISOLUZIONE
	In safety, vacuum the brazier and switch on again. If the problem persists, contact the Support Service



Ogni condizione di allarme causa l'immediato spegnimento dell'apparecchio. Premere il tasto di accensione P3 per resettare l'allarme. prima di riaccendere l'apparecchio, verificare che la segnalazione sia stata risolta.

19 CLEANING THE APPLIANCE

Before carrying out any cleaning operation on the appliance, take the following precautions:

- switch off the product and in "OFF" status disconnect the power supply cable;
- ensure all the parts are cold to touch;
- ensure the combustion ash is completely out.

To clean the surfaces, on the painted metal parts, use a cloth soaked in water and soap. Use of abrasive detergents or diluents causes damage to the surface of the product.



Please carefully adhere to the following instructions for correct cleaning of the appliance. Non-compliance could cause its malfunctioning.


19.1 CLEANING THE FIREPLACE

Open the fire door, using the specific tool and:


- vacuum the slide bringing the ash to the brazier;
- dismantle the flame trap, vacuum the compartment hidden by the flame trap (paying utmost attention not to damage the sensor placed behind the flame trap).

OPERATING PROCEDURE:


Open the fire door using the "cold lever" supplied with the product as in the figure below:

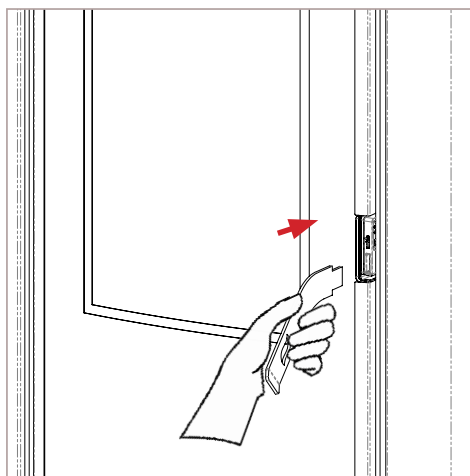


Insert the "cold lever", supplied with the product, in the specific compartment, as indicated in the figure below:

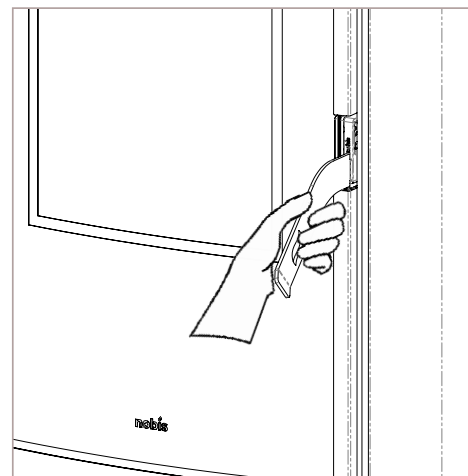


Lift the "cold lever", supplied with the product, to release the door and allow fire door opening, as in the figure below:

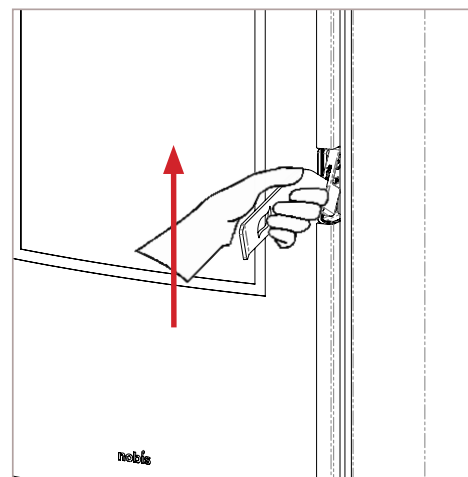


To extract the flame trap, lift it slightly as in the figure below:

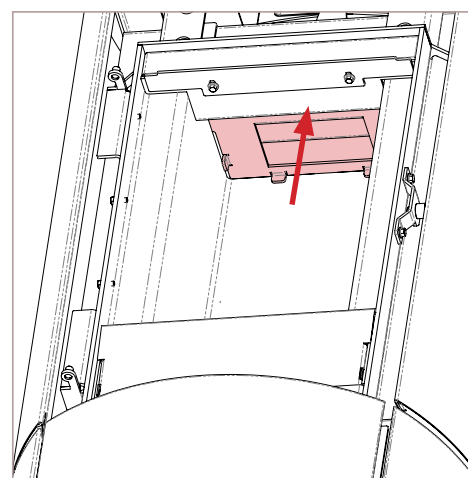


Remove it by bringing the lever towards you with slight movement downwards as in the figure below:

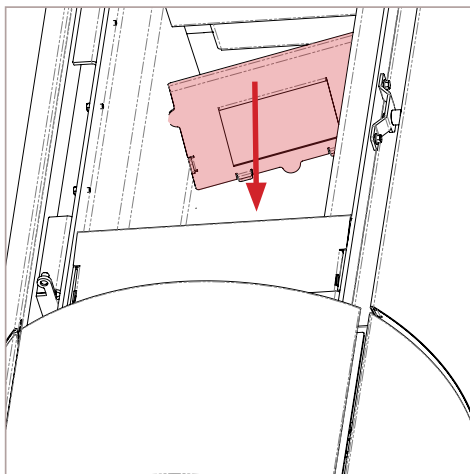

With a soft bristle brush, eliminate the combustion particulate, allowing it to fall in the slide beneath.

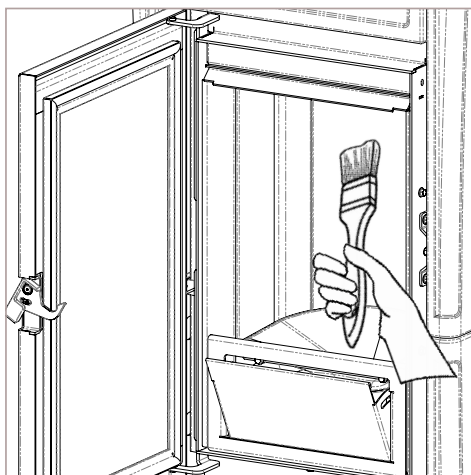

Vacuum the slide, the hatch and the surface hidden by the flame trap, paying attention not to knock the vacuum cleaner nozzle off the vermiculite.

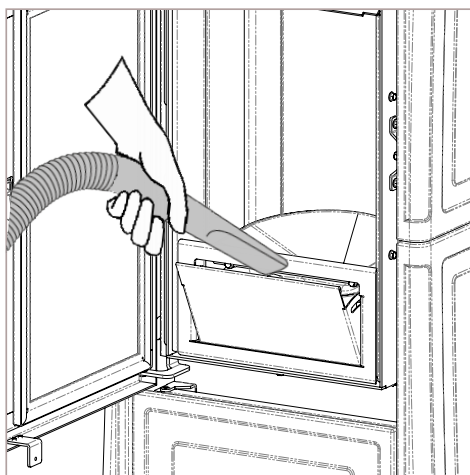


19.2 CLEANING THE GLASS DOOR

To clean the glass, use a cotton cloth or kitchen paper. You are advised to clean the glass using a damp cloth with water and combustion ash (with an abrasive function), avoiding use of products with additives that could, over time, wear the seals, glass and paint.

i Do not switch on the appliance if the glass is damaged. Contact the support service to replace it.

OPERATING PROCEDURE:
Clean with a cotton cloth as in the figure below:

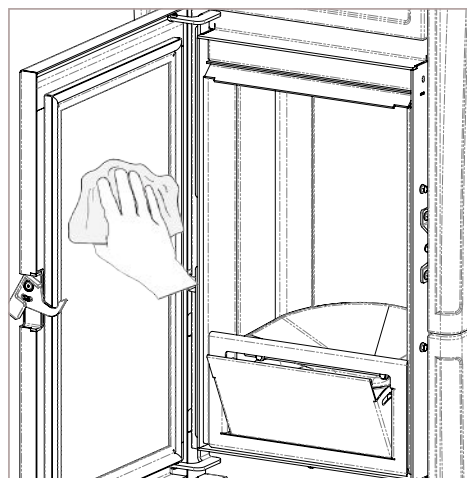


19.3 CLEANING THE ASH PAN

Remove the pan from the appliance and remove the ash deposited, using an ash vacuum cleaner; pay utmost attention to the presence of embers that could still be hot and which could damage the appliance used for cleaning.


i The cleaning operations depend on the quality of the pellets used and the frequency of use of the product. It can happen that such operations must be carried out more frequently than stated in the manual.

OPERATING PROCEDURE:


Open the door positioned under the fire door, as in the figure below:

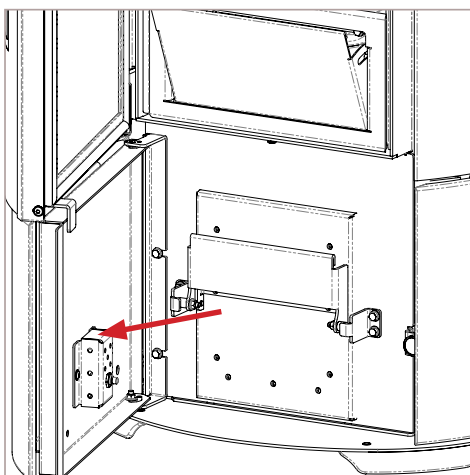

Open the ash pan using the handle, as in the figure below:

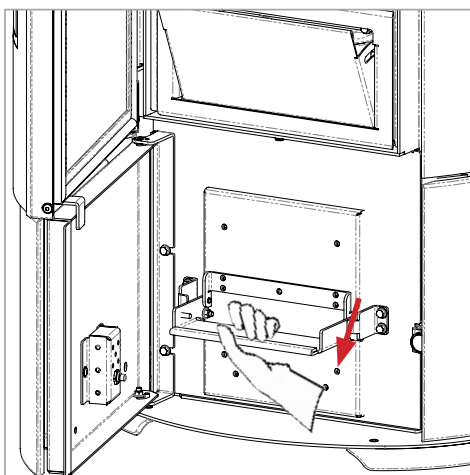

Remove the ash pan and empty it, as in the figure below:

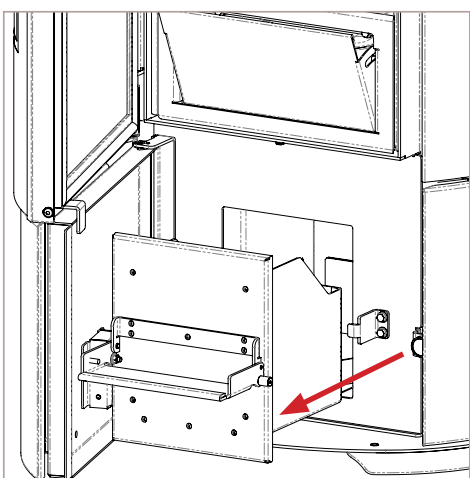

CLEANING CYCLES TABLE

Below, the control and/or maintenance intervention are summarised which are indispensable for correct appliance operation.

PARTS/FREQUENCY	TIME
Ash pan (approx. time)	7 DD
Glass	2-3 DD
Extraction pipe *	1 SE
Door seal/ash pan*	1 SE
Tube bundle scraper (where present)	7 DD
Chimney flue	1 SE
Combustion chamber	2-3 DD
Vacuum pellet tank	30 DD
Electromechanical components*	1 SE


LEGEND:

* - operations which can be carried out by a technician authorised by the manufacturer;
 DD - day/s
 SE - season

MAINTENANCE

DATE	INTERVENTION CARRIED OUT

20 WIRING DIAGRAM

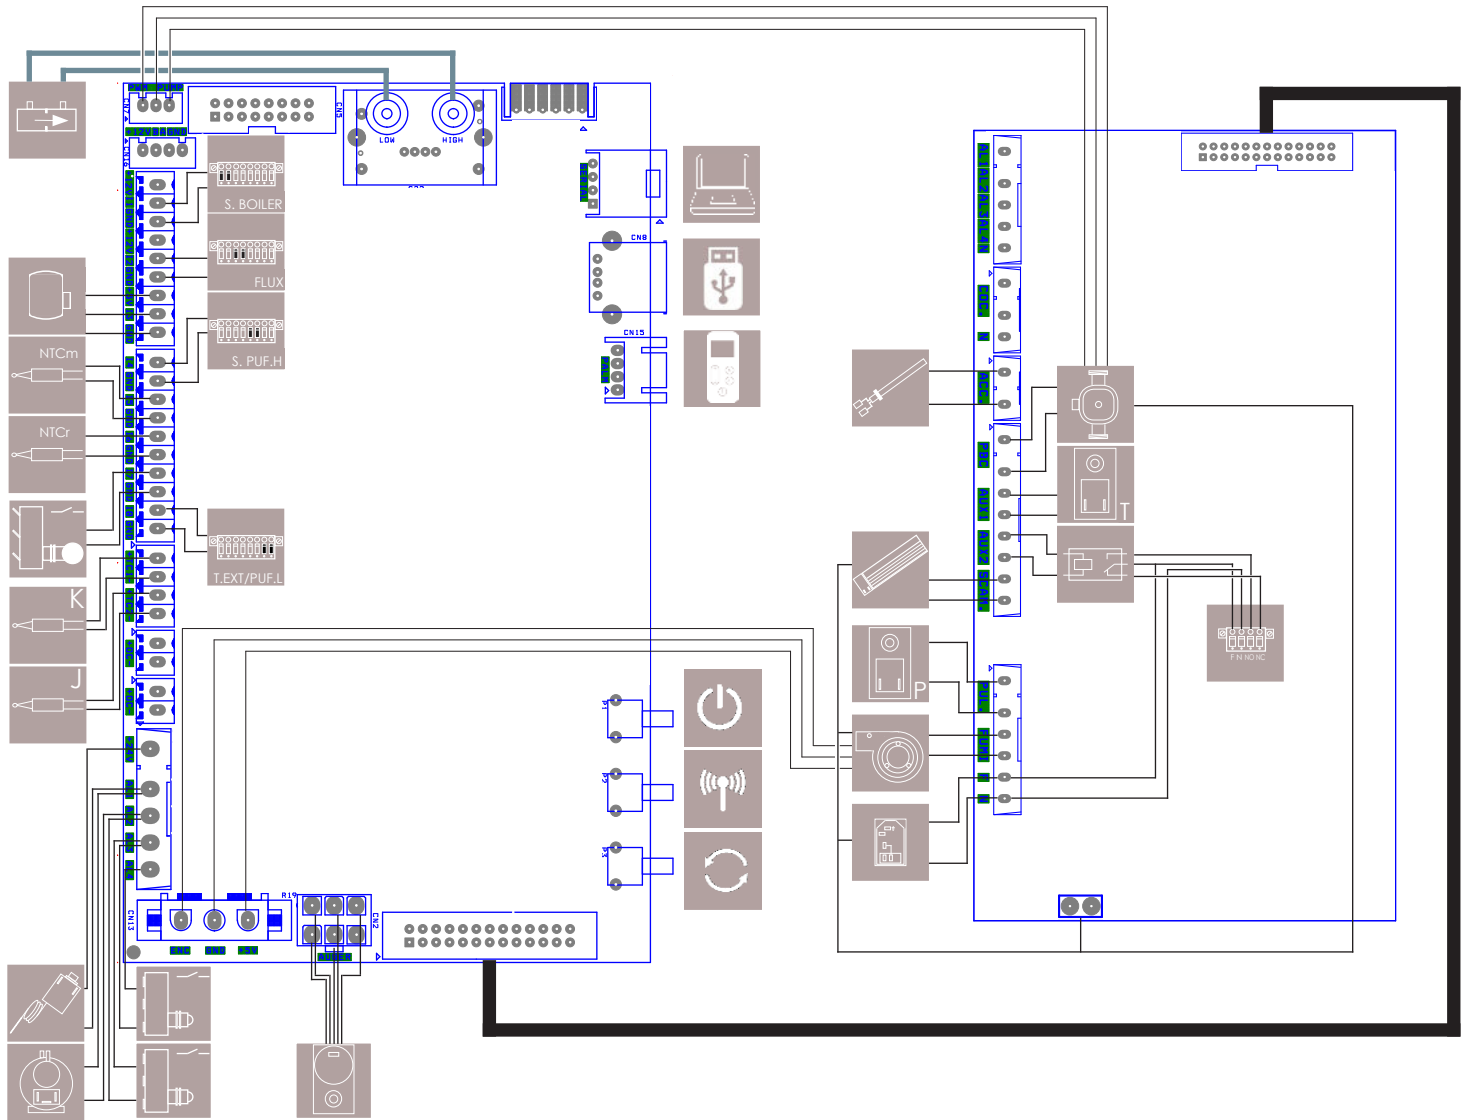

LEGENDA:

	PRESSURE SENSOR		SMOKE EXTRACTOR		SAFETY VACUUM SWITCH		REMOTE UNIT SELECTION KEY
	STROKE COUNTER MECHANICAL CLEANER		MANUAL RESET THERMAL SWITCH		VENTILATION FRONT		UPGRADE FW KEY (technical support only)
	TERMINAL EXT. THERM./HOT WATER TANK (LOW) CONNECTION		RESISTOR SWITCH ON		PC CONNECTION (technical support only)		BOILER WATER CIRCULATOR
	FLAME PROBE		GEARMOTOR MECHANICAL CLEANER		USB CONNECTION (technical support only)		TERMINAL HOT WATER TANK (HIGH)
	SMOKE PROBE		CONTACT DOOR/ ASH PAN (1) PELLET TANK (2)		EMERGENCY CABLE HANDHELD DEVICE		TURBULATORS GEAR MOTOR
	GEARMOTOR BLDC 24V		220V SOCKET WITH ON/OFF SWITCH AND FUSE		APPLIANCE SWITCH ON KEY		TERMINAL FLOW SWITCH CONNECTION
	SYSTEM SUPPLY PROBE		SYSTEM RETURN PROBE		TERMINAL DHW TANK (BOILER) CONNECTION		FLOW SWITCH PRESSURE READING SYSTEM H ₂ O
	RELAY + TERMINAL 3-WAY VALVE CONNECTION						



NOBIS srl

Via Palazzolo N.11
25037 - Pontoglio - BS
www.nobisfire.it

Nobis Srl cannot be held in any way liable for any errors in this manual and considers itself free to change the features of its products without prior warning.

Cod.110-002-0020N_S1